Getting Started: How to unlock the drive





EASY TO USE

YOUR datAshur SHIPS WITH DEFAULT PIN CODE 1-1-2-2-3-3-4-4

 
1. *Press KEY Button	& a will blink together
2. *Within 10 seconds enter User PIN (factory default PIN 1-1-2-2-3-3-4-4) and press KEY Button	will illuminate together for approximately 4 seconds and then change to blinking
Connect the datAshur into USB port within 30 seconds	will illuminate and remain solidwill illuminate and flicker
The datAshur can now be accessed as any other USB storage device	Your computer assigns a new drive letter (e.g. F: or G:)
To lock the datAshur, save all data and unplug the drive	All indicators will turn off Drive is now locked

*before connecting









iStorage datAshur is developed and manufactured by iStorage Ltd. and is manufactured by Islurage Ltd. and Islurage Ltd.



Please note:



The datAshur drive may need to be charged before use for 30-60 minutes by inserting into a powered USB port.

CAUTION

FOR SECURITY, CHANGE FACTORY DEFAULT PIN

SEE OTHER SIDE FOR INSTRUCTIONS

Quick Start Guide



www.istorage-uk.com

How to change User PIN:





FOR SECURITY, CHANGE FACTORY DEFAULT PIN

PIN must not be sequential or all the same number e.g. 1-2-3-4-5-6-7 or 3-3-3-3-3-3

1. Press KEY Button	& will blink together
2. Enter User PIN (factory default PIN 1-1-2-2-3-3-4-4) and press KEY Button	will illuminate together for approximately 4 seconds and then change to blinking
3. Press and hold KEY Button or 3 seconds	♣ & ๋ will illuminate together
4. While & a are illuminated enter New User PIN (must be 7-15 digits) and press KEY Button O-	& a will blink in unison
5. Re-enter New User PIN and press the KEY Button O	will illuminate and then change to blinking
Insert the datAshur into USB port	NB





Quick Start Guide Step 1 **Enter your PIN**



Step 2 Plug & Play



Step 3 Unplug to automatically lock

Download a complete User Guide at www.istorage-uk.com

