

Camera to Cloud Set-Up Streaming SRT Protocol into dvCloud





1. Access ADMIN on your Encoder in browser window. Click on Operation Mode. Located between Source and CG.



 In a seaprate browser window, access dvCloud.tv by typing in the supplied domain name, which was provided to you from dvCloud. Then select a channel which you want to stream from.

I want to	Stream from my hardware encoder	~
Protocol	SRT	~
Please co IP / Hostn Port: 5006	nfigure your encoder with the SRT IP and port below ame: 295f07393dc1a8e.servers.dvcloud.tv	En J

5. Once SRT is selected, Copy SRT IP which is located underneath Protocol.

128 K	~	60	~
Stream Type		SRT Mode	
SRT 😽	on ∼	Caller	~
2	<u>`</u>		
Caller IP Address	V	SRT Port	
Undo		9001	
Cut			

2. Under Stream Type, Select SRT.

Choose	your live video source	
I want to	Stream from my hardware encoder	~
Protocol	RTMP	~
Please co	RTMP	
Flease cu	SRT	

4. Under "Choose your live video source", Select SRT for Protocol.



 Go back to the Encoder ADMIN browser, right click and paste into Caller IP Address

www.dvcloud.tv



Camera to Cloud Set-Up Streaming SRT Protocol into dvCloud

want to	Stream from my hardware encoder	~	
Protocol	SRT	~	
Please co	nfigure your encoder with the SRT IP and po	rt below:	
	ame: 20Ef07202de1e0e eepiere dueleud tu	e	

7. Go back to the dvCloud browser window. Copy Port which is underneath the SRT IP.



8. Go back to the Encoder ADMIN browser again, right click and paste into SRT Port



 Select "Save Channel" located at the bottom of the dvCloud channel



 Select Apply on the encoder window ADMIN. Then Click "Start Stream"