


# datavideo

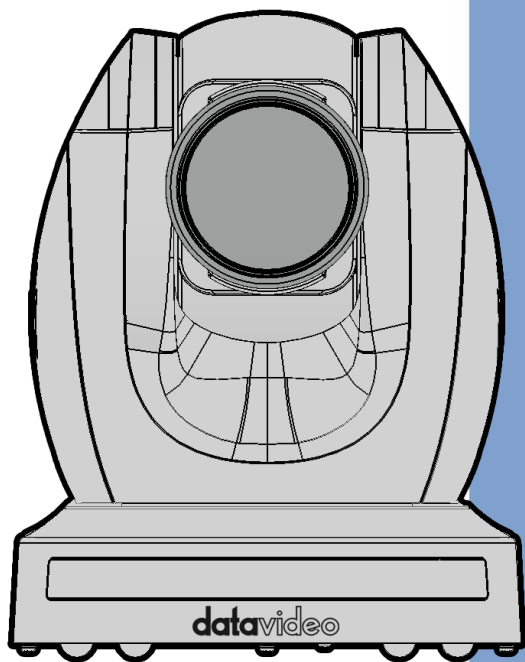

4K PTZ CAMERA

**PTC-280**

**Instruction Manual**

[www.datavideo.com](http://www.datavideo.com)

# Table of Contents

<b>TABLE OF CONTENTS</b> .....	<b>2</b>
<b>FCC COMPLIANCE STATEMENT</b> .....	<b>5</b>
<b>WARNINGS AND PRECAUTIONS</b> .....	<b>5</b>
<b>WARRANTY</b> .....	<b>7</b>
<i>STANDARD WARRANTY</i> .....	7
<i>THREE YEAR WARRANTY</i> .....	7
<b>DISPOSAL</b> .....	<b>8</b>
<b>1. PRODUCT OVERVIEW</b> .....	<b>9</b>
<b>FEATURES</b> .....	9
<b>2. LOCATION AND FUNCTION OF PARTS</b> .....	<b>10</b>
<b>3. BASIC SETUP</b> .....	<b>14</b>
3.1 POWER-ON INITIALIZATION .....	14
3.2 VIDEO OUTPUT .....	14
<i>HDMI Video Output</i> .....	16
<i>3G-SDI Video Output</i> .....	16
<b>4. REMOTE CONTROL AND ON-SCREEN MENU</b> .....	<b>17</b>
4.1 REMOTE CONTROL FUNCTIONS .....	17
4.2 OSD MENU .....	22
4.3 PROFESSIONAL JARGON EXPLANATIONS OF THE OSD MENU .....	33
<b>5. INSTRUCTION FOR INSTALLATION</b> .....	<b>34</b>
<b>6. NETWORK CONNECTION</b> .....	<b>40</b>
6.1 DHCP MODE .....	41
6.2 STATIC IP .....	43
6.3 DVIP .....	44
<b>7. WEB USER INTERFACE</b> .....	<b>47</b>
7.1 LIVE .....	47
7.2 VIDEO .....	48

7.2.1	How to Connect the PTC-280 to a Datavideo Switcher after a 60FPS/50FPS Video Streaming (Take the HS-1300 as an example) .....	52
7.3	IMAGE .....	56
7.4	AUDIO .....	58
7.5	SYSTEM.....	60
7.6	NETWORK .....	62
7.7	INFORMATION.....	72
7.8	THE PTZ CONTROL AREA OF THE WEB UI.....	74
8.	HOW TO USE THE WEB UI TO SET AND CALL PRESETS .....	77
9.	CONTROL THE CAMERA BY THE PTZ VIEW ASSIST APP .....	78
10.	DIP SWITCH SETTINGS .....	79
10.1	DIP SWITCH SW1 .....	79
10.2	DIP SWITCH SW2 (IRID) .....	80
11.	HOW TO PLAY THE RTSP STREAM BY THE VLC PLAYER.....	81
12.	HOW TO PLAY THE MULTICAST BY THE VCL PLAYER .....	83
13.	HOW TO STREAM TO FACEBOOK.....	84
14.	HOW TO STREAM TO YOUTUBE.....	95
15.	HOW TO DO THE SRT STREAMING BY THE VMIX SOFTWARE .....	99
16.	REMOTE CONTROL PORT PINOUTS .....	112
17.	FIRMWARE UPDATE.....	114
17.1	FIRMWARE UPDATE BY THE PTC-280 FIRMWARE UPDATE TOOL.....	114
17.2	FIRMWARE UPDATE BY THE USB FLASH DRIVE.....	118
18.	FREQUENTLY-ASKED QUESTIONS.....	121
19.	DIMENSIONS.....	123
20.	SPECIFICATIONS.....	124
	SERVICE AND SUPPORT .....	128

**Disclaimer of Product and Services**

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

## **FCC Compliance Statement**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## **Warnings and Precautions**

1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.

9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord's rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
  - a. When the power cord is damaged or frayed;
  - b. When liquid has spilled into the unit;
  - c. When the product has been exposed to rain or water;
  - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
  - e. When the product has been dropped or the cabinet has been damaged;
  - f. When the product exhibits a distinct change in performance, indicating a need for service.

# Warranty

## ***Standard Warranty***

- Datavideo equipment are guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- The product warranty period begins on the purchase date. If the purchase date is unknown, the product warranty period begins on the thirtieth day after shipment from a Datavideo office.
- All non-Datavideo manufactured products (product without Datavideo logo) have only one year warranty from the date of purchase.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered under warranty.
- Viruses and malware infections on the computer systems are not covered under warranty.
- Any errors that are caused by unauthorized third-party software installations, which are not required by our computer systems, are not covered under warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- All accessories including headphones, cables, and batteries are not covered under warranty.
- Warranty only valid in the country or region of purchase.
- Your statutory rights are not affected.


## ***Three Year Warranty***

- All Datavideo products purchased after July 1st, 2017 are qualified for a free two years extension to the standard warranty, providing the product is registered with Datavideo within 30 days of purchase.



- Certain parts with limited lifetime expectancy such as LCD panels, DVD drives, Hard Drive, Solid State Drive, SD Card, USB Thumb Drive, Lighting, Camera module, PCIe Card are covered for 1 year.
- The three-year warranty must be registered on Datavideo's official website or with your local Datavideo office or one of its authorized distributors within 30 days of purchase.

## Disposal

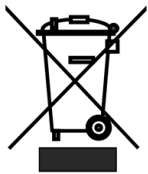

### **For EU Customers only - WEEE Marking**

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



# 1. Product Overview

The PTC-280 series features a large 1/2.5" CMOS sensor, supports high-quality 2160p50/60 UHD video output, features 12x optical zoom, 16x digital zooms and supports versatile outputs, including 3G-SDI, HDMI, IP stream, NDI (PTC-280 NDI). The PTC-280 series is the ideal choice for taking your remote camera production to the next level.

## Features

- PTZ Camera for Supporting 2160p50/59.94/60 Resolutions.
- Supports 12x Optical Zoom and 16x Digital Zoom.
- Supports 4K Video Output Interfaces including HDMI and H.264/H.265 Streaming.
- Supports 2160p and 1080p (3G-SDI) Simultaneous video output.
- Supports RS-422 Serial Port Control.
- Supports External Audio Input interface: Audio In/Line In (switchable on the web UI).
- Provides Friendly Web UI.

## 2. Location and Function of Parts

Front of Camera	
	
1	<b>Lens</b> Built-in 1/2.5" 8.51M Pixel CMOS 4K color camera with white balance control, backlight compensation, automatic gain and etc.
2	<b>Tally LED</b> Tally lamp will be turned ON upon receiving the ON signal.
3	<b>Sensor for Remote Control</b> Remote control IR receiver

## Rear of Camera



### USB Port

This USB port is used for updating firmware. Users can save the latest version of firmware in a USB flash drive and then insert it into this interface for firmware updating.


Note: After inserting the USB flash drive, please remember to turn "ON" the SETUP->USB UPGRADE from the OSD menu of the PTC-280 camera.

### Power Input

DC in socket connects the supplied 12V PSU. The connection can be secured by screwing the outer fastening ring of the DC In plug to the socket.

3	<p><b>HDMI OUT</b></p> <p>The <b>HDMI OUT</b> allows you to connect an external HDMI monitor via an HDMI cable.</p>
4	<p><b>3G-SDI OUT</b></p> <p>The <b>3G-SDI OUT</b> allows you to connect an external monitor via an SDI cable.</p>
5	<p><b>MIC IN/LINE IN</b></p> <p>The 3.5mm audio input receives external audio.</p>
6	<p><b>RS-422 Interface (RJ-45)</b></p> <p>The RS-422 interface serves to connect external RS-422 devices. Use an Ethernet cable to connect external RS-422 controllers. See <a href="#">“Section 16 Remote Control Port Pinouts”</a> for making the cable for the RS-422 interface.</p> <p><b>Note: If users want to switch between the RS-422 and DVIP communication protocols, please use the No.4 pin of the DIP Switch which is located at the bottom of the PTC-280. Please switch this pin to “ON” for operating in DVIP mode. If this pin is switched to “OFF”, it will operate in “RS-422” mode.</b></p>
7	<p><b>IRID Interface</b></p> <p>This interface allows users to use the DVIP Switch to control the numbering of the camera on the remote controller. Users can use this interface to set the camera to any number from No.1 to No. 4 in order to use remote controller to control the camera.</p>
8	<p><b>DVIP Interface</b></p> <p>The DVIP interface allows users to control the PTC-280 camera by Datavideo’s camera controller by using the DVIP Protocol which is developed by Datavideo.</p>

## Bottom of Camera

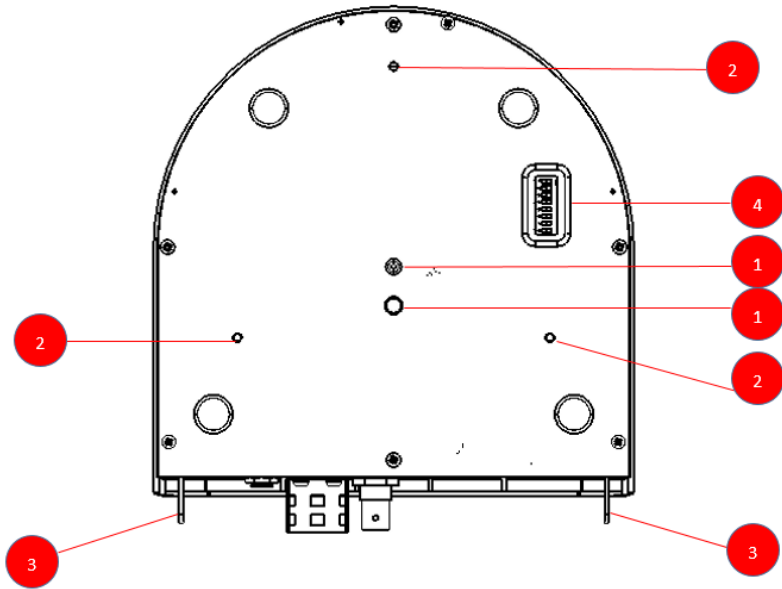

1 **Tripod Screw Hole** allows the user to mount the camera on the tripod.

2 **Screw Hole**  
Screw holes for ceiling bracket mounting.

3 **For Safety Rope**  
Ties safety rope for fixing the camera to the ceiling.

4 **DIP Switch**  
This DIP Switch allows users to adjust needed parameters such as VISCA ID, resolutions, remote control protocol and video modes.

### 3. Basic Setup

#### 3.1 Power-On Initialization

As shown in the diagram below, after you plug in the power cord, the tally light in the front will start flashing red and will be OFF as soon as the power-on initialization is complete. The camera head should be at the HOME position with the lens facing front. If the power is inserted, the camera lens will go back to the position where the camera power is off last time.



Connect the DC 12 V power adapter

#### 3.2 Video Output

You are allowed to view the camera video via **DVIP port**, **HDMI OUT** and **3G-SDI OUT**.

##### DVIP Port



Please follow following steps for viewing the camera video from the web UI.

- **Connect the PTC-280 camera directly to your PC/Notebook PC**

1. Connect the PTC-280 to your PC or laptop by an Ethernet Cable.
2. Open the web UI by the connected PC or laptop and then please enter the default IP address into the address bar of the web browser.

**Note: The default static IP address of the PTC-280 is 192.168.100.88.**

3. The login page of the web UI will be opened, please enter the user name and password (the default user name and password are admin/admin).
4. Open the preview window for previewing the video which is shot by the camera.

- **Connect the PTC-280 camera to your PC or laptop by a router.**

1. Please set the Ethernet IP address of your PC or laptop as 192.168.100.x(x means 0-255) and it will be at the same local area network as the PTC-280.
2. Please use an RJ-45 Ethernet cable to connect from the DVIP port on the rear panel of the PTC-280 to the LAN port of a router. And then please use another RJ-45 Ethernet cable to connect from the RJ-45 Ethernet port of your PC or laptop to the LAN port of the same router.
3. Please open the web UI from the connected PC or laptop and then please enter the default IP address of the camera into the address bar of the web browser.

**Note: The default static IP address of the PTC-280 is 192.168.100.88.**

4. The login page of the web UI will be opened, please enter the user name and password (the default user name and password are admin/admin).
5. Click into the preview window on which the video will be displayed.

## HDMI Video Output



Connect the HDMI OUT to an external connected monitor using an HDMI cable.

## 3G-SDI Video Output



Connect the SDI OUT to an external connected monitor using an SDI cable.










## 4. Remote Control and On-Screen Menu





This chapter provides an overview of remote control functions and OSD menu.







### 4.1 Remote Control Functions



No	Function Keys	Descriptions
1	<p style="text-align: center;"><b>Standby Key</b></p> 	<p><b>Standby Key</b> Press this button once to enter Standby Mode, press it again to enter Normal Mode. <b>Note: The power consumption in Standby Mode is approximately half of the power consumption in Normal Mode.</b></p>
2	<p style="text-align: center;"><b>Number Keypad</b></p> 	<p><b>Number Keypad</b> <b>Set, recall and clear presets</b> using the number keypad.</p> <p><b>Set Preset</b> At first, please press <b>PRESET</b>, and then please press any of the 0~9 <b>number key</b> to save the PTZ position.</p> <p><b>Call Preset</b> Press any of the <b>number key</b> to recall the PTZ position which is saved by the Preset function.</p> <p><b>Note: Make sure the preset that you want to recall contains PTZ settings before pressing the number key.</b></p> <p><b>Clear Preset</b></p> <ul style="list-style-type: none"> <li>At first, please press the <b>RESET</b> button and then please press any <b>number key</b> to delete the PTZ position which is saved in corresponding Preset No.</li> <li>Moreover, users can press <b>【*】 + 【#】 + 【RESET】</b> to delete all PTZ positions which are saved in all Preset numbers at one time.</li> </ul>
3 & 11	<p style="text-align: center;"><b>Asterisk and Pound Keys</b></p> 	<p>The asterisk and pound keys form various combinations with other keys to access certain functions directly.</p> <p>(1) <b>【*】 + 【#】 + 【1】</b> : Set OSD MENU language to English.</p> <p>(2) <b>【*】 + 【#】 + 【3】</b> : Set OSD MENU language to Chinese.</p> <p>(3) <b>【*】 + 【#】 + 【4】</b> : Show current IP address.</p>

No	Function Keys	Descriptions
		(4) <b>【*】 + 【#】 + 【6】</b> : Restore default value rapidly. (5) <b>【*】 + 【#】 + 【8】</b> : Check camera version. (6) <b>【*】 + 【#】 + 【9】</b> : Set upside down setting rapidly. (7) <b>【*】 + 【#】 + 【MANUAL】</b> : Restore default IP address.
4	<b>PRESET Button</b> 	<b>Set Preset Position</b> Press <b>PRESET</b> to set presets. See <b>Number Keypad</b> description for instructions.
5	<b>Home Key</b> 	<b>Home Key</b> Press <b>Home</b> to return the camera head to the center. Note: In the OSD menu, press <b>Home</b> to enter the selected option item and <b>MENU</b> to exit.
6	<b>Return Key</b> 	<b>Return Key</b> Press this key to return to last level of the OSD menu.
7	<b>Zoom in Slowly(SLOW+)/ Zoom out Slowly(SLOW-)</b> 	<b>Zoom in Slowly(SLOW+)/ Zoom out Slowly(SLOW-)</b> Press this key to zoom in the camera lens slowly(SLOW+) or to zoom out the camera lens slowly(SLOW-).

No	Function Keys	Descriptions
	<p><b>Zoom in Fastly(FAST+)/ Zoom out Fastly(FAST-)</b></p> 	<p><b>Zoom in Fastly(Fast+)/ Zoom out Fastly(Fast-)</b></p> <p>Press this key to zoom in the camera lens fastly(FAST+) or to zoom out the camera lens fastly(FAST-).</p>
8	<p><b>L/R SET Key</b></p> 	<p><b>Left/Right Setting Key</b></p> <p>Press this L/R SET key and combine this key with the number key 1 and number key 2 to set the panning-tilting directions of the camera lens.</p> <ul style="list-style-type: none"> <li>Press the <b>L/R SET</b> plus <b>number key 1 (STD)</b> simultaneously to set the panning direction to be the same as the left/right direction setting in the OSD menu.</li> <li>Press the <b>L/R SET</b> plus <b>number key 2 (REV)</b> simultaneously to set the panning direction to opposite direction compared to the left/right direction setting in the OSD menu.</li> </ul>
9	<p><b>Focus Keys</b></p> 	<p><b>Focus Keys</b></p> <p>Those keys are used for Focus adjusting.</p> <p>Press the <b>AUTO</b> key to focus the focus to the center of the object.</p> <p>Press the <b>MANUAL</b> key to focus the focus to the center of the object manually.</p> <p>Press the <b>MANUAL</b> key and then use the <b>FAR</b> button (Focus to FAR) or the <b>NEAR</b> button (Focus to NEAR) to adjust the focal length manually.</p>
10	<p><b>Camera Selection Keys</b></p> 	<p><b>Camera Selection Keys</b></p> <p>Users can use the F1-F4 keys to assign the ID number to camera among the multi-camera scene. After that, please switch between the four cameras by using the Camera Select keys.</p> <p><b>Note: Please refer to F1-F4 keys section for showing how to assign the camera ID number.</b></p>

No	Function Keys	Descriptions
12	<p><b>RESET Button</b></p> 	<p><b>Clear Preset</b></p> <p>Press <b>RESET</b> and corresponding <b>0-9 Number keys</b> to clear preset. Please see <b>Number Keypad</b> description for instructions.</p>
13	<p><b>PTZ Control Keys</b></p> 	<p><b>PTZ Control Keys</b></p> <p>Press the <b>arrow</b> buttons for panning and tilting operations. Press the <b>Home</b> key for turning the camera lens from the back side to the front side.</p>
14	<p><b>MENU Key</b></p> 	<p><b>MENU</b></p> <p>Press this key for entering or exiting the <b>OSD</b> menu.</p>
15	<p><b>Backlight</b> <b>BACKLIGHT</b></p> 	<p><b>Backlight</b> <b>BLC ON/OFF:</b> Press this key for turning on the backlight compensation function, press this key again for turning off the backlight compensation function.</p>
16	<p><b>PTZ Reset Button</b></p> 	<p><b>PTZ Reset Button</b></p> <p>Press this key and then the camera will do the default self-testing.</p>
17	<p><b>Image Freezing button</b></p> 	<p><b>Image Freezing Button</b></p> <p>Press this key once and then no matter how the camera head is moved, the camera image will be frozen on current image. Press this button again will unfreeze the image.</p>

## 4.2 OSD Menu

On-Screen Menu allows the user to modify various camera settings. Press **[MENU]** on the **remote control** to open the on-screen menu as shown below.

OSD Menu
Exposure
Color
Image
P/T/Z
Noise Reduction
Setup
Communication Setup
Information
Restore Default
<b>【Home】 Enter</b>
<b>【Menu】 Exit</b>

The table below summarizes the main option items and their sub-options.

Main Options							
	Exposure	Color	Image	P/T/Z	Noise Reduction	Setup	Communication Setup
Sub-Options	Mode	WB Mode	Luminance	SpeedByZoom	NR2D-Level	Language	Protocol
	ExpComp Mode	RG	Contrast	AF-Zone	NR3D-Level	HDMI RGB Mode	V_Address
	Backlight	BG	Sharpness	AF-Sense		Video Format	V_AddrFix
	Gain Limit	Saturation	Flip-H	L/R Set		Audio Select	Net Mode
	Anti-Flicker	Hue	Flip-V	Display Info		SDI-3G Mode	Baudrate
	Meter	AWB Sens	B&W-Mode	Image Freeze		USB UPGRADE	
	DRC		Gamma	Digital Zoom		VISCA ID	
			Style	Pre Speed		Audio Channel	
			Pre Zoom Speed				

	<b>Information</b>	<b>Restore Default</b>
<b>Sub-Options</b>	ARM	Restore? Yes/No
	SOC	
	Model	
	Date	
	AF	
	Format	
	Lens	
	IP	
	GateWay	
	NetMask	
	CTRL SRC	

Details of all options in the on-screen menu are listed in the table below.

Main Menu	Sub Menu	Options	Options
Exposure	Mode	Auto	
		Manual	
		SAE	
		AAE	
		Bright	
	ExpCompMode	Off	
		On	ExpComp -7~+7
	Backlight	Off	
		On	
	Gain Limit	0	
		1	
		2	
		3	
		4	
		5	
		6	
		7	
		8	
		9	
		10	
		11	
		12	
		13	
		14	
		15	
		16	
		17	
		18	
		19	
		20	
		21	
	22		
	Anti-Flicker	Off	
50Hz			
60Hz			
Meter	Average		
	Center		
	Smart		
	Top		
DRC	0		
	1		
	2		



	3
	4
	5
	6
	7
	8
Iris	F1.8
	F2.0
	F2.4
	F2.8
	F3.4
	F4.0
	F4.8
	F5.6
	F6.8
	F8.0
	F9.6
	F11.0
	Close
Shutter	1/30
	1/60
	1/90
	1/100
	1/125
	1/180
	1/250
	1/350
	1/500
	1/725
	1/1000
	1/1500
	1/2000
	1/3000
	1/4000
	1/6000
1/10000	
Gain	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	10
	11
	12
	13
14	

		15	
		16	
		17	
		18	
		19	
		20	
		21	
		22	
	Bright	0	
		1	
		2	
		3	
		4	
		5	
		6	
		7	
		8	
		9	
	Color	WB Mode	10
			11
			12
			13
14			
15			
RG Tuning		16	
		17	
		Auto	
		Indoor	
		Outdoor	
		OnePush	
		Manual	
		VAR	
BG Tuning	0		
	+1		
	+2		
	+3		
	+4		
	+5		
	+6		
	+7		
	+8		
	+9		
+10			
	0		
	+1		
	+2		
	+3		
	+4		
	+5		
	+6		
	+7		

	+8
	+9
	+10
Saturation	60%
	70%
	80%
	90%
	100%
	110%
	120%
	130%
	140%
	150%
	160%
	170%
	180%
	190%
200%	
Hue	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	10
	11
	12
	13
	14
AWB Sens	High
	Middle
	Low
RG	0~255
BG	0~255
Color Temp	2500K
	2600K
	2700K
	2800K
	2900K
	3000K
	3100K
	3200K
	3300K
	3400K
	3500K

		3600K	
		3700K	
		3800K	
		3900K	
		4000K	
		4100K	
		4200K	
		4300K	
		4400K	
		4500K	
		4600K	
		4700K	
		4800K	
		4900K	
		5000K	
		5100K	
		5200K	
		5300K	
		5400K	
		5500K	
		5600K	
		5700K	
		5800K	
		5900K	
		6000K	
		6100K	
		6200K	
		6300K	
		6400K	
		6500K	
		6600K	
		6700K	
		6800K	
		6900K	
		7000K	
		7100K	
		7200K	
		7300K	
		7400K	
		7500K	
		7600K	
		7700K	
		7800K	
		7900K	
		8000K	
<b>Image</b>	Luminance	0	
		1	
		2	
		3	
		4	
		5	

	6	
	7	
	8	
	9	
	10	
	11	
	12	
	13	
	14	
Contrast	0	
	1	
	2	
	3	
	4	
	5	
	6	
	7	
	8	
	9	
	10	
	11	
	12	
	13	
14		
Sharpness	Auto	
	0	
	1	
	2	
	3	
	4	
	5	
	6	
	7	
	8	
	9	
	10	
	11	
	12	
	13	
14		
15		
Flip-H	Off	
	On	
Flip-V	Off	
	On	
B&W-Mode	Off	
	On	
Gamma	EXT	
	PC	
	0.48	
	0.5	

		0.56	
		0.63	
	Style	Default	
		Norm	
		Bright	
		PC	
	SpeedByZoom	Off	
		On	
	AF-Zone	Front	
		Top	
		Center	
		Bottom	
	AF-Sense	High	
		Low	
		Normal	
	L/R Set	STD	
		REV	
	Display Info	Off	
		On	
	Image Freeze	On	
		Off	
	Digital Zoom	Off	
		2x	
		4x	
		8x	
		16x	
P/T/Z	Pre Speed	1	
		2	
		3	
		4	
		5	
		6	
		7	
		8	
		9	
		10	
		11	
		12	
		13	
		14	
		15	
		16	
		17	
		18	
		19	
		20	
		21	
		22	
		23	
		24	
	Pre Zoom Speed	0	

		1	
		2	
		3	
		4	
		5	
		6	
		7	
Noise Reduction	NR2D-Level	Auto	
		Off	
		1	
		2	
		3	
		4	
	NR3D-Level	Auto	
		Off	
		1	
		2	
		3	
		4	
		5	
		6	
Setup	Language	繁體	
		EN	
		中文	
		русский	
	HDMI RGB Mode	HDMI	
		DVI	
	Video Format	1080P25	
		720P50	
		1080P60	
		1080P50	
		1080I60	
		1080I50	
		1080P30	
		720P60	
		1080P29.97	
		1080I59.94	
		1080P59.94	
		720P59.94	
		4KP29.97	
		4KP59.94	
4KP25			
4KP30			
4KP50			
4KP60			
Audio Select	MIC		
	LINE IN		

	SDI-3G Mode	LEVEL-A	
		LEVEL-B	
	USB UPGRADE	Off	
		On	
	VISCA ID	By DIP	
		By OSD	
	Audio Channel	Stereo	
		Mono	
<b>Communication Setup</b>	Protocol	VISCA	
		PELCO-D	
		PELCO-P	
		Auto	
	V_Address	7	
	V_AddrFix	Off	
		On	
	Net Mode	Serial	
		Paral	
	Baudrate	38400	
2400			
4800			
9600			
<b>Information</b>	ARM		
	SOC		
	Date		
	AF		
	Format		
	Lens		
	IP		
	GateWay		
	NetMask		
	CTRL SRC		
<b>Restore Default</b>	Restore?		

Note: For the “Audio Channel” option in the OSD menu, if the “mono” is selected, the data for the left audio channel will be copied to the right audio channel and they will output together. If the audio source is “mono”, only the left audio channel will output the audio.



## 4.3 Professional Jargon Explanations of the OSD

### Menu

There are some professional jargons or nouns which are shown in the OSD menu of the PTC-280 camera, please refer to this section for realizing those jargons.

- **Speed by Zoom:** When this function is turned “ON”, at the time when the zoom-in/zoom out is beginning or it is about to reach the zoom-in/zoom-out limit or users want to stop zooming in/zooming out, the zoom-in/zoom-out speed of the camera lens will be reduced linearly. When this function is turned “OFF”, the zoom-in/zoom-out speed will be consistent no matter when the camera zoom-in is started or stopped.
- **Flip-H:** This is the “Horizontal Flipping”. When “ON” is selected, the screen which is shot by the camera will flip horizontally. If “OFF” is selected, the screen will be shown in normal direction.
- **Flip-V:** This is the “Vertical Flipping”. When “ON” is selected, the screen which is shot by the camera will flip vertically. If “OFF” is selected, the screen will be shown in normal direction.
- **L/R Set:** If the “REV” is selected for this option, the panning direction of the PTC-280 camera lens will be opposite to the direction which is controlled by the remote controller. If the “STD” is selected for this option, the panning direction of the camera lens will be the same as the direction which is selected by the remote controller.

## 5. Instruction for installation


**Note: Only mount the bracket on formwork or concrete surface. Do NOT mount the bracket on plasterboard.**

### Step 1 – DIP Switch Setting

Set the Mirror option to H+V mode.

### Step 2 – One End of Retaining Wire


Attach the retaining wire to the junction box mounted on the ceiling by screwing one end of the retaining wire into a screw hole in the junction box with a screw (not supplied) as shown in the diagram below.

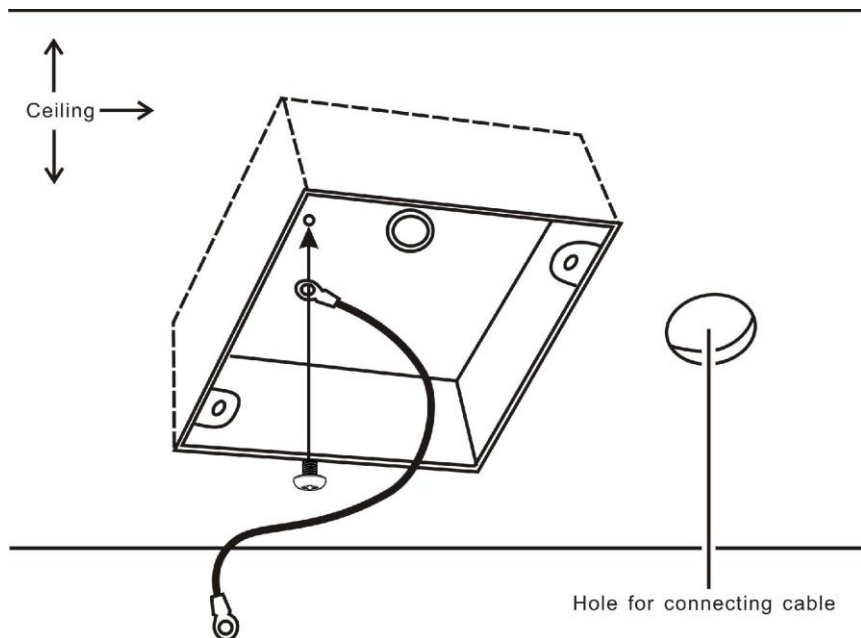

### Step 3 – Ceiling Bracket (B)


Again, as illustrated in the diagram below, screw a ceiling bracket (B) into the junction box mounted on the ceiling.

Make sure the screw holes of the ceiling bracket (B) are aligned with the holes on the junction box.

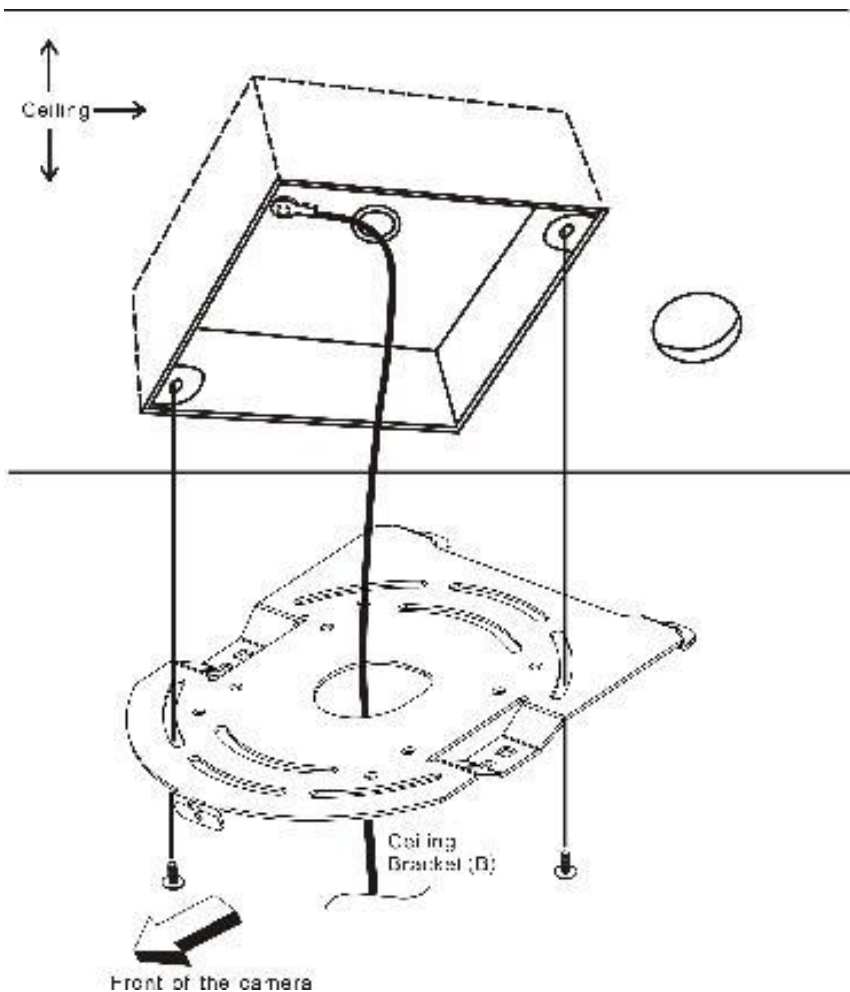


## **Step 4 – Ceiling Bracket (A) and Camera**

- Screw ceiling bracket (A) into the bottom of the camera using three screws.
- Position the screws as shown in the diagram below.
- Align the screw holes on the bottom of the camera with those in the ceiling bracket.
- Insert the screws into the corresponding screw holes in the numbered order.
- The other end of the retaining wire is screwed into the screw hole #3.
- Securely tighten all three screws.

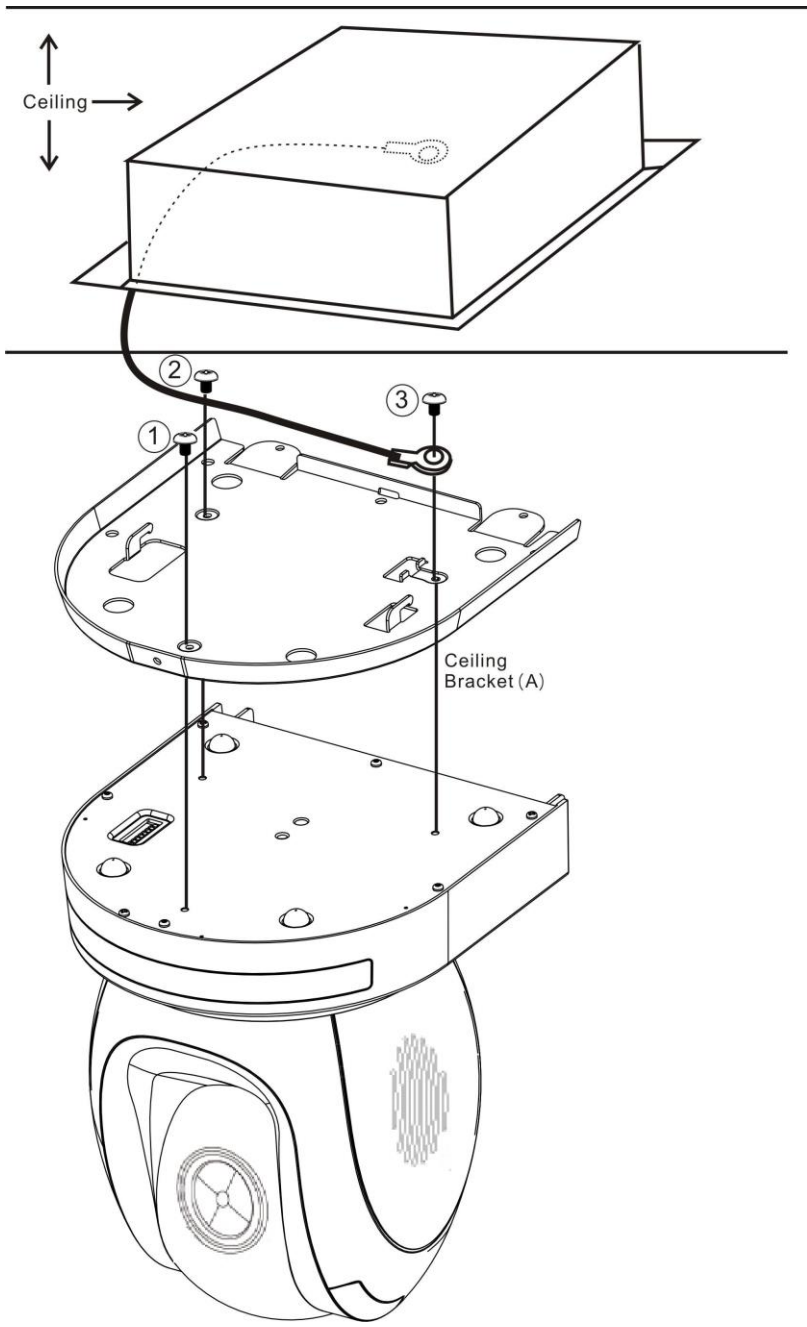


## Step 5 – Mount Camera to Ceiling

---

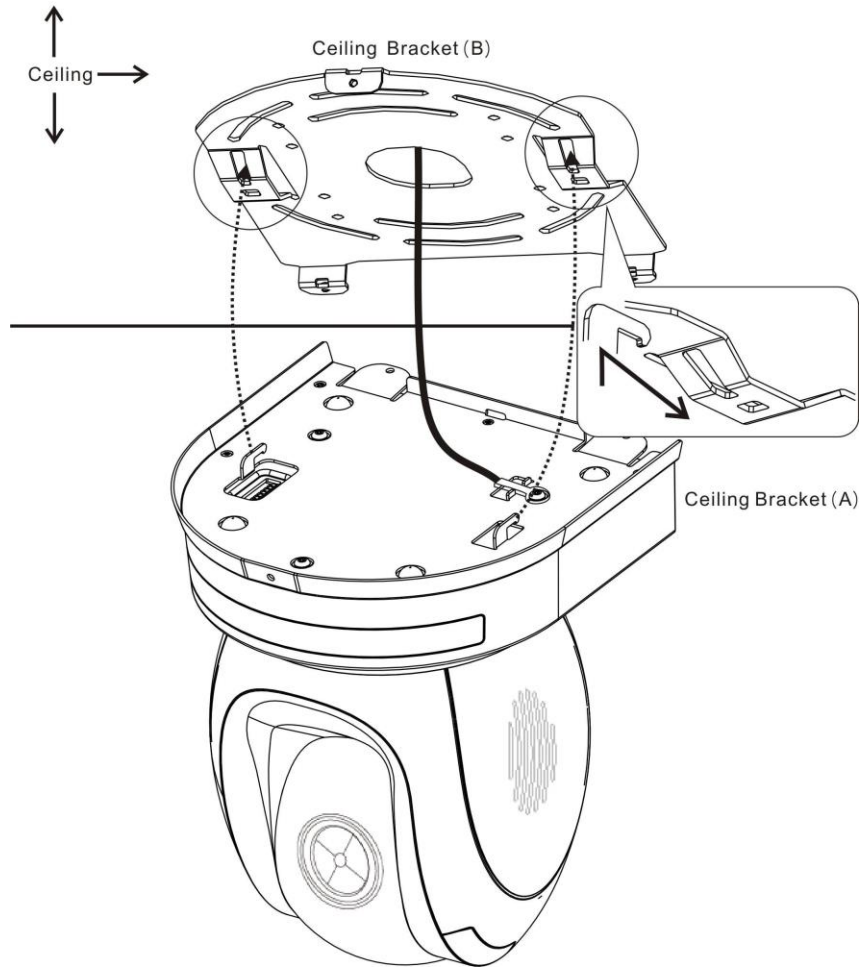


## Step 6 – Screw to Fix Camera

Fix the camera by screwing three screws into the corresponding screw holes as shown in the diagram below.

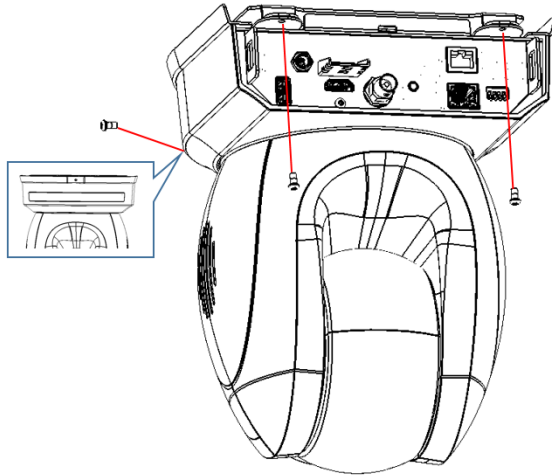

## Step 7 – Cable Connection

Connect the cables to the connectors located on the rear of the camera.

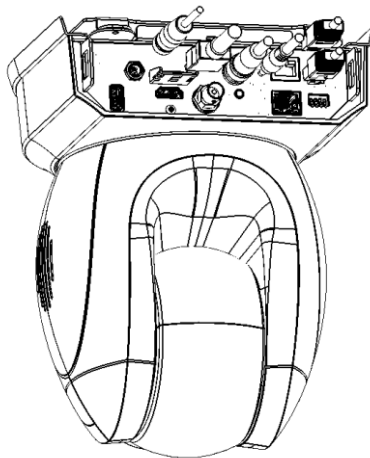


## 6. Network Connection

The Ethernet port on the back panel of your PTC-280 allows you to connect to camera from the PC/Laptop with Static or dynamic IP addresses. To access and modify these network settings, you will need to login to the camera's web interface.

If this is your first time using the device, please note that the camera's default IP address is **192.168.100.88**.

Set up direct connection between the camera and your PC/laptop as depicted in the diagram below; remember to manually assign an IP address of **192.168.100.X** to your PC/laptop.

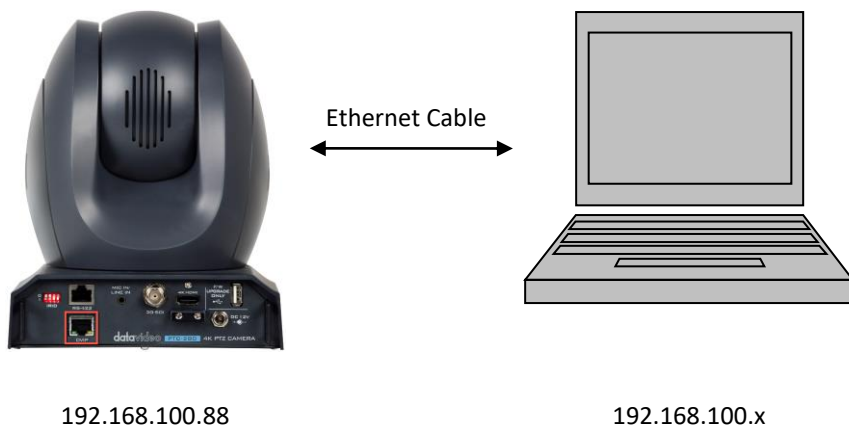

On your PC/laptop, open a web browser and in the address bar, enter the camera's default IP address, 192.168.100.88 then press the **ENTER** key which should take you to login page of the web interface.

**data**video

username

password


Login



The default login credentials are:

- User Name: admin
- Password: admin


After users login into the web user interface successfully, please click the “Network” option and then please click the “IP Configuration Type” drop-down menu from the “Lan Settings” area to modify the connection type of the camera to DHCP or Fixed IP. If the “Fixed IP Address” is selected, it will be set in fixed IP mode. If the “Dynamic IP Address” is selected, it will be set in DHCP mode. After the setting is finished, please click the “Apply” button for completing the setting.

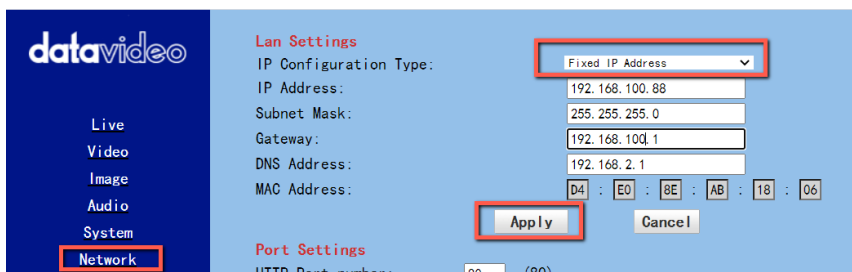


In following two chapters, we will show you how to enable DHCP and Static IP modes in two separate sections.

## 6.1 DHCP Mode

Dynamic Host Configuration Protocol (DHCP) is a network protocol that enables a server to automatically assign an IP address to a network device from a defined range of numbers configured for a given network. The diagram below illustrates a DHCP network connection example.

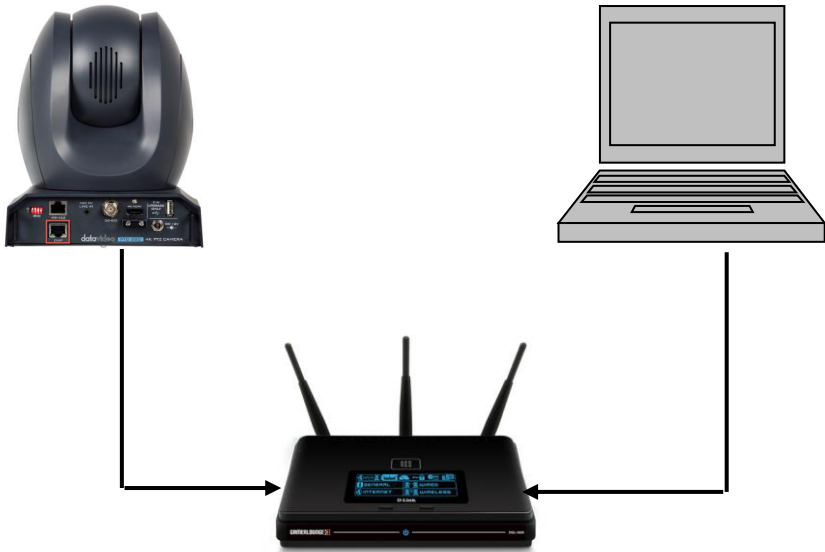

In order to enable the DHCP mode of the camera, please select “Dynamic IP Address” from the “IP Configuration Type” drop-down menu for assigning a dynamic IP address to PTC-280 by the router. After that, please click the “Apply” button to save the new settings and then please reboot the PTC-280.

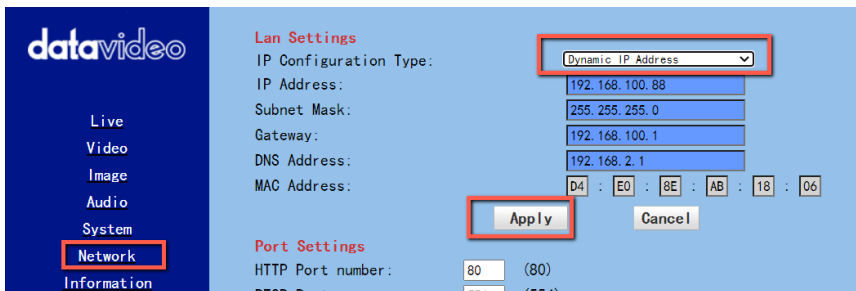


## 6.2 Static IP

A static IP address is a fixed address manually assigned to PTC-280. First please select “Fixed IP Address” from the “IP Configuration Type” drop-down menu and then please enter an IP address for the camera, the subnet mask and the gateway IP.

**Note: Never assign an address that ends in .0 or .255 as these addresses are typically reserved for network protocols. An address to the very start of the IP pool is also not recommended as it is always reserved for the router.**

After the Static IP address is set, please click the “Apply” button for saving new settings and then please reboot the PTC-280.

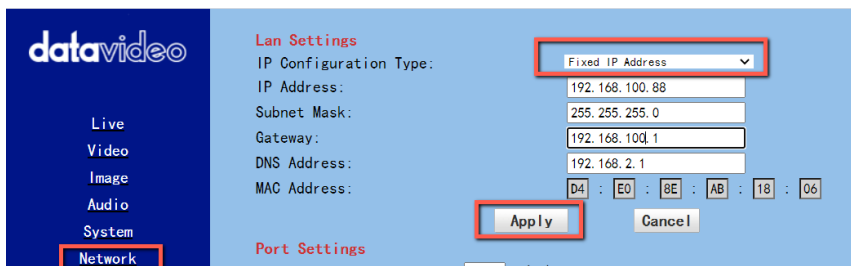

The screenshot displays the 'datavideo' web interface. On the left, a navigation menu includes 'Live', 'Video', 'Image', 'Audio', 'System', and 'Network', with 'Network' highlighted. The main content area is titled 'Lan Settings' and contains the following fields:

- IP Configuration Type: Fixed IP Address (selected in a dropdown menu)
- IP Address: 192.168.100.88
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.100.1
- DNS Address: 192.168.2.1
- MAC Address: D4 : E0 : 8E : AB : 18 : 06

Below these fields are 'Apply' and 'Cancel' buttons. A 'Port Settings' section is partially visible at the bottom, showing 'HTTP Port number: 80 (80)'.

## 6.3 DVIP

DVIP is a special network configuration software tool designed for DVIP device search on the same network and configuring device network settings such as Hostname, DHCP mode, IP address, subnet mask, gateway IP, and primary and secondary DNS.

Depending on your operating system, download DVIP Configuration Tool from the respective sites listed as follows:

PC: <https://www.microsoft.com/en-us/p/dvip-network-config/9p6gtz839k6s?activetab=pivot%3Aoverviewtab>

Android:

[https://play.google.com/store/apps/details?id=com.datavideo.dvipnetconfig&hl=en\\_US](https://play.google.com/store/apps/details?id=com.datavideo.dvipnetconfig&hl=en_US)


iOS: <https://itunes.apple.com/tw/app/dvip-network-config/id1177895983?mt=8>

After you've installed the DVIP Network Configuration Tool, follow the steps outlined below to scan for online DVIP devices and configure their corresponding settings.


Step 1: Open the DVIP Network Configuration Tool and then select the connected Ethernet option from the "Network interface" pop-up window. After that please press the "OK" button




Step 2: After the Network interface is selected, the DVIP Network Configuration Tool interface will be shown as following diagram.

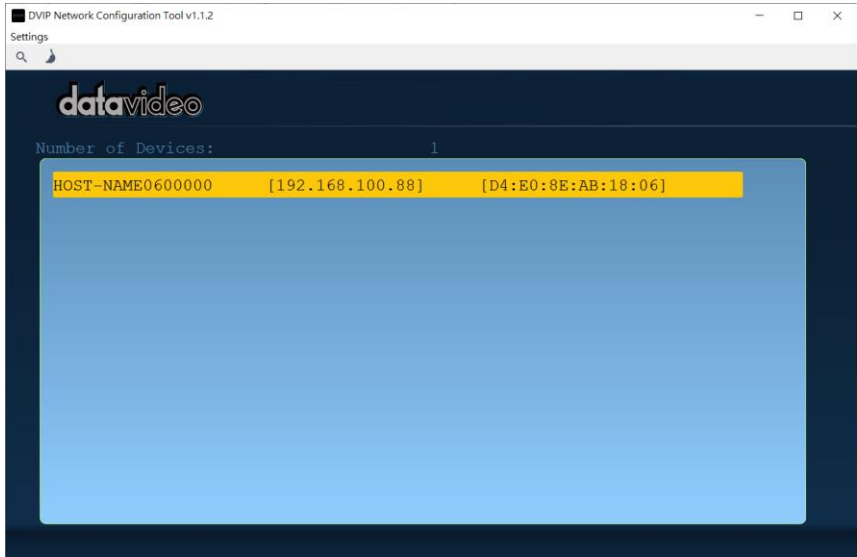


Step 3: Please press “HOST NAME” and then the network settings pop-up window will be shown.

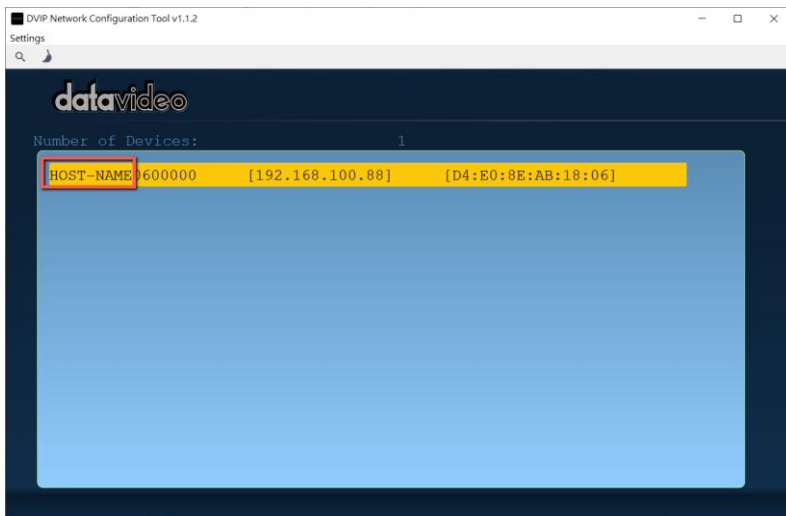

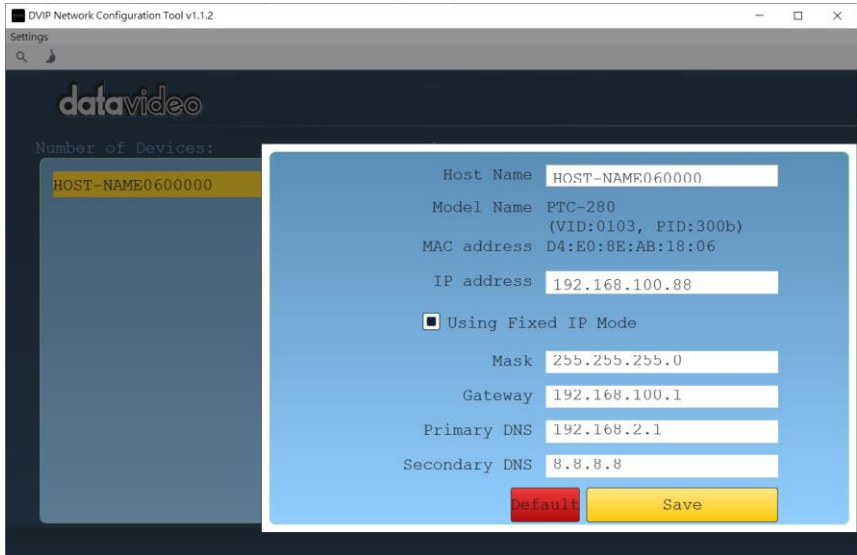

Step 4: users can click “Host Name” column for changing the device name. Users can also click each setting column for changing value if it is needed. After that, please press “Save” for saving those settings. Users can also press “Default” for resuming those settings to factory default value.

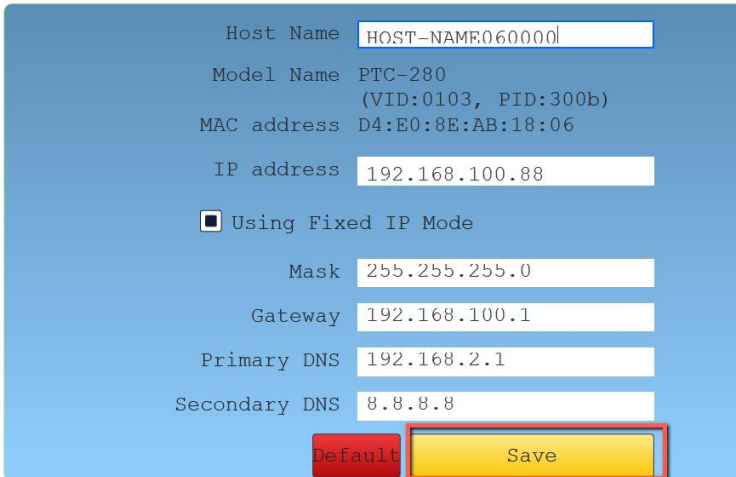


## 7. Web User Interface

The web based user interface allows you to set and control your PTC-280 devices.

### 7.1 Live

Live option allows users to preview the image which is shot by the PTC-280 in a real-time basis. Please click the “Live” option and then please select “HTML5” from the drop-down menu below the preview window. After that, users can preview the image which is shot by the PTC-280 camera from the preview window.

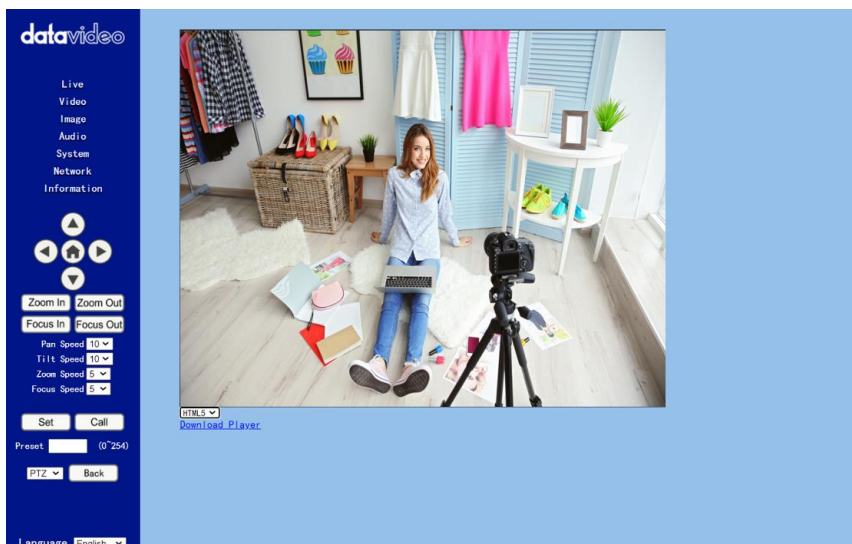

## 7.2 Video

“Video” option allows users to set various parameters including Video Format, Encode Level. Moreover, it also allows users to set the Encode Protocol, Resolution, Bit Rate, Frame Rate, I Key Frame Interval, Bit Rate Control, Slice Split Enable and Slice Size for the First stream and Second stream. The main interface for the Video option is shown in the following diagram.

Please see following section for realizing the descriptions for each item for the Video option.

The screenshot displays the 'Video Settings' interface. On the left is a dark blue navigation sidebar with the 'datavideo' logo at the top. The sidebar contains a vertical menu with options: Live, Video, Image, Audio, System, Network, and Information. Below the menu is a directional pad with four arrows and a home button. Further down are buttons for 'Zoom In', 'Zoom Out', 'Focus In', and 'Focus Out'. Below these are speed controls for Pan Speed (10), Tilt Speed (10), Zoom Speed (5), and Focus Speed (5), each with a dropdown arrow. At the bottom of the sidebar are 'Set' and 'Call' buttons, a 'Preset' field with a dropdown arrow and '(0~254)' text, a 'PTZ' dropdown arrow, and a 'Back' button. At the very bottom of the sidebar is a 'Language' dropdown arrow set to 'English'.

The main content area is light blue and titled 'Video Settings'. It is divided into two sections: 'First stream' and 'Second stream'. Each section contains the following parameters:




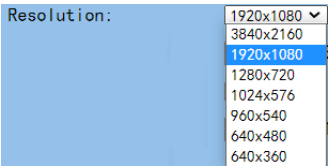
- Video Format:** OSD (dropdown)
- Encode Level:** mainprofile (dropdown)
- Encode Protocol:** H264 (dropdown)
- Resolution:** 1280x720 (dropdown)
- Bit Rate:** 4096 (input) (32~51200) kbps
- Frame Rate:** 25 (dropdown) fps
- I Key Frame Interval:** 25 (input) (2~1200)
- Bit Rate Control:** CBR (selected radio), VBR (radio)
- Slice Split Enable:** 0n (radio), Off (radio)
- Slice Size:** 45 (input) blocks

The 'Second stream' section has the same parameters but with different values:

- Resolution:** 320x240 (dropdown)
- Bit Rate:** 4096 (input) (32~20480) kbps
- Frame Rate:** 30 (dropdown) fps
- I Key Frame Interval:** 25 (input) (2~1200)
- Bit Rate Control:** CBR (selected radio), VBR (radio)
- Slice Split Enable:** 0n (radio), Off (radio)
- Slice Size:** 15 (input) blocks

At the bottom right of the main content area are 'Apply' and 'Cancel' buttons.



Items	Descriptions
	<p><b>Video Format</b></p> <p>It can support three video formats including 50Hz(PAL), 60Hz(NTSC) and OSD.</p>
<ul style="list-style-type: none"> <li>● <b>50Hz (PAL):</b> If you select this option, the maximum frame rate per second (FPS) for the streaming video will be 50.</li> <li>● <b>60Hz (NTSC):</b> If you select this option, the maximum frame rate per second for the streaming video will be 60.</li> <li>● <b>Dial Priority:</b> If you select this option, the maximum frame rate per second will be 30, and it is possible that the parameters including the video format and frame rate will be affected by the camera OSD menu settings.</li> </ul> <p>Note:</p> <ol style="list-style-type: none"> <li>1. If you want to use the PTC-280 camera to connect to some Datavideo switchers which support the interlace format only such as the HS-1300, SE-120 MU and SE-650, please remember to select the “Dial Priority” option as your video format.</li> <li>2. If the 50Hz or the 60Hz is selected for the PTC-280 web UI, the SDI or the HDMI output format of the PTC-280 camera will be fixed at 1080p 50/60.</li> </ol>	
	<p><b>Encode Level</b></p> <p>It allows users to select needed Encode Level from four Encode Levels including baseline profile, mainprofile, highprofile and svc-t.</p>
	<p><b>Encode Protocol (First Stream &amp; Second Stream)</b></p> <p>It allows users to select three Encode Protocols including H.264, H.265 and MJPEG for the “First Stream” and “Second Stream”.</p>
<p>Resolution for the first stream</p> 	<p><b>Resolution (First Stream &amp; Second Stream)</b></p> <p>There are two drop-down menus including the resolution for the First Stream and the resolution for the Second Stream for users to select different resolution. When the</p>

Items	Descriptions
<p>Resolution for the second stream</p> <p>Resolution: <input type="text" value="640x360"/> <ul style="list-style-type: none"> <li>640x360</li> <li>1920x1080</li> <li>1280x720</li> <li>1024x576</li> <li>720x576</li> <li>720x408</li> <li style="background-color: #007bff; color: white;">640x360</li> <li>480x270</li> <li>320x240</li> <li>320x180</li> </ul> </p>	<p>resolution is higher, the image will become clearer. However, it will occupy more network bandwidth.</p>
<p>Bit Rate: <input type="text" value="4096"/> (32~51200) kbps</p>	<p><b>Bit Rate (First Stream &amp; Second Stream)</b></p> <p>It allows users to determine the Bit Rate range by themselves. The range for the Bit Rate for the first stream is from 32-51200kbps. The range for the Bit Rate for the second stream is from 32-20480kbps.</p> <p>Note: If the network bandwidth is too narrow and the Bit Rate setting is too high, it will cause that the video streaming can not be transferred normally and it will cause a poor visual effect for viewers.</p>
<p>Bit Rate: <input type="text" value="1024"/> (32~20480) kbps</p>	
<p>Frame Rate: <input type="text" value="25"/> fps</p>	<p><b>Frame Rate (First Stream &amp; Second Stream)</b></p> <p>Users can set the Frame Rate from the drop-down menu by themselves. The range is from 1 to 60. When the Frame Rate value is higher, the image will be smoother. When the Frame Rate value is lower, it will cause an unsmooth image.</p>

Items	Descriptions
I Key Frame Interval: <input type="text" value="25"/> (2~1200)	<p><b>I Key Frame Interval (First Stream &amp; Second Stream)</b></p> <p>It allows users to set the interval between two I frames. When the interval is larger, the response speed from the viewing window will be lower.</p>
Bit Rate Control: <input type="radio"/> CBR <input checked="" type="radio"/> VBR	<p><b>Bit Rate Control (First Stream &amp; Second Stream)</b></p> <p>There are two ways for Bit Rate Control including the CBR and VBR.</p> <p>CBR: The video encoder will encode the video according to the default speed.</p> <p>VBR: The video encoder will encode the video by adjusting the encoding speed according to the default value in order to achieve best image quality.</p>
Slice Split Enable: <input type="radio"/> On <input checked="" type="radio"/> Off	<p><b>Slice Split Enable (First Stream &amp; Second Stream)</b></p> <p>This is used to turn on or turn off the Slice Split function.</p>
Slice Size: <input type="text" value="68"/> blocks	<p><b>Slice Size (First Stream &amp; Second Stream)</b></p> <p>This is used to set the Slice size.</p>
<input type="button" value="Apply"/>	<p><b>Apply Key</b></p> <p>After all of the options are set, please click the “Apply” key and then all of the changes will be effective.</p>

Items	Descriptions
<div style="border: 1px solid black; padding: 2px; display: inline-block; background-color: #e0e0e0;">Cancel</div>	<b>Cancel Key</b> If the “Cancel” key is pressed, all of the changes will not take effect.



### 7.2.1 How to Connect the PTC-280 to a Datavideo Switcher after a 60FPS/50FPS Video Streaming (Take the HS-1300 as an example)

When you select the 50Hz or the 60Hz option from the [Video] → [Video Settings] drop-down menu in the PTC-280 web UI for streaming videos, the PTC-280 HDMI/SDI output will be fixed at 1080p 50/60. However, the Datavideo HS-1300 switcher supports the 1080i video format only rather than the 1080p video format. So, when you want to connect the PTC-280 to the HS-1300 switcher, it is necessary for you to set the PTC-280 again in order to make sure that the video formats for the PTC-280 and the HS-1300 are consistent. Moreover, it can assure that the input screen that is received by the HS-1300 can be displayed correctly. Please follow following steps for setting the PTC-280 and the HS-1300.

- **Take the adjustment to 1080i59.94 as an example**


Step 1. At first, please press the “MENU” button which is located on the PTC-280 remote controller to open the OSD menu.


Step 2. After the OSD menu is opened, please use the down arrow

button  to select the “Setup” option and then please press the “Home” button  to enter the “Setup” option.

Step 3. Please select the “Video Format” option, and then please use the left



arrow button and the right arrow button  /  of the remote controller to select 1080i60, 1080i59.94 or 1080i50 video format.

Step 4. Please press the “MENU” button  which is located on the control panel of the HS-1300 switcher to open its OSD menu.


Step 5. Please use the down arrow button  to select the “Setup” option.

Step 6. Please use the right arrow button to select “Standard” “1080i59.94”, and then please press the “Enter” button to enter this option for further adjustment.


Step 7. If the format for the “Standard” is not 1080i59.94, please use the up

arrow button and down arrow button  /  which are located on the control panel to adjust the video format to 1080i59.94.

Step 8. Please select your desired “Standard” value and then press the “ENTER” button again to confirm your selection.


Step 9. Please press the right arrow button  again to select the “Save Setup” option.

Step 10. Please use the left arrow button and the right arrow button to select the “Yes” button and then press the “ENTER” button again to save the setting.

Step 11. After the setting is saved, please press the “MENU” button  to exit to the previous menu and to exit the OSD menu of the HS-1300. The “Standard” option setting for the HS-1300 is finished until this step.

Step 12. Please open the web UI of the PTC-280.

Step 13. Please click the “Video” option, and then please select “OSD” from the “Video Format” drop-down menu.

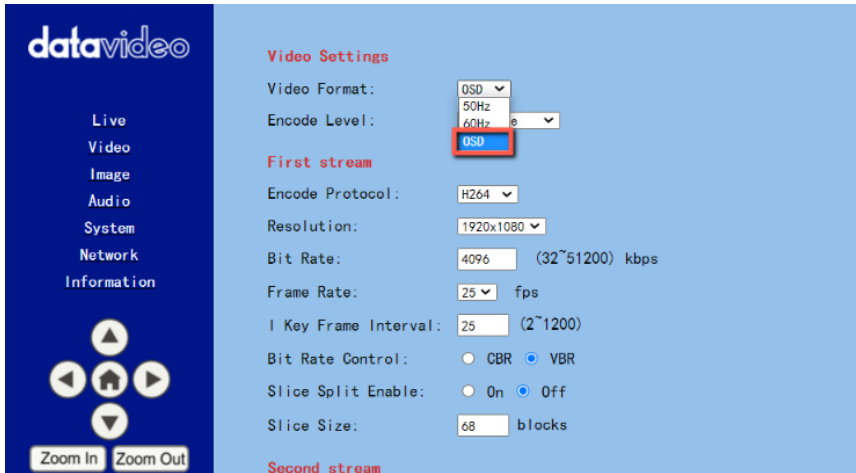

Step 14. Please click the “Apply” button .

Step 15. Please click the “Reboot” button in the “System” option to reboot the PTC-280.

Step 16. After the PTC-280 is rebooted, please use an SDI cable to connect from the 3G-SDI interface which is located on the rear panel of the PTC-280 to the SDI IN interface which is located on the rear panel of the HS-1300, or you can use an HDMI cable to connect from the HDMI interface which is located on the rear panel of the PTC-280 to the HDMI IN interface which is located on the rear panel of the HS-1300. After that, you can see the image which is shot by the PTC-280 is displayed in the MULTIVIEW window of the HS-1300 correctly.

For SDI: The SDI IN 1 to SDI IN 4 interfaces which are located on the rear panel of the HS-1300 represent the MULTIVIEW window’s Input 1 to Input 4.

For HDMI: The HDMI IN 1 to HDMI IN 2 interfaces which are located on the rear panel of the HS-1300 represent the MULTIVIEW window’s Input 5 to Input 6.

Note: Datavideo’s SE-650, HS-1200 MU and HS-1300 switchers support 1080i video format only. So, the 1080p video format is not supported by the above-mentioned switchers. If you want to connect the PTC-280 camera to the SE-650 or the HS-1200 MU switcher, please remember to select the “OSD” item

from “Video→ Video Format” in the PTC-280 web UI. Moreover, please use the OSD menu of the PTC-280 camera and the OSD menu of the above-mentioned switchers to adjust them in the same video standard before connecting to prevent the video format incompatible issue and the issue that the video that is shot by the PTC-280 can not be displayed normally in the MULTIVIEW window of the above-mentioned switchers.

## 7.3 Image

The “Image” option allows users to see the image that is shot by the PTC-280 from the preview window. Moreover, users can adjust many parameters including Brightness, Saturation, Contrast, Sharpness and Hue from this interface by using sliders. Please select “HTML5” from the drop-down menu which is located below the preview window and then users can preview the image which is shot by the PTC-280 from the preview window. The main interface of the Image option is shown as following diagram.

The screenshot displays the 'datavideo' PTZ camera control interface. On the left sidebar, the 'Image' menu item is selected. The main area shows a live video feed of a woman sitting on a rug in a room, with a camera on a tripod in the foreground. Below the video feed, there are five sliders for image adjustments: Brightness (7), Saturation (4), Contrast (8), Sharpness (16), and Hue (7). There are also checkboxes for 'Flip' and 'Mirror', and 'Apply', 'Cancel', and 'Default' buttons at the bottom.








- **Brightness:** This option allows users to adjust the Brightness. Please use the slider for adjusting the Brightness.
- **Saturation:** This option allows users to adjust the Saturation. Please use the slider for adjusting the Saturation. After the adjustment is finished, please click the “Apply” button and then it is set successfully.
- **Saturation:** This option allows users to adjust the Saturation. Please use the slider for adjusting the Contrast. After the adjustment is finished, please click the “Apply” button and then it is set successfully.
- **Sharpness:** This option allows users to adjust the Sharpness. Please use the slider for adjusting the Sharpness. After the adjustment is finished, please click the “Apply” button and then it is set successfully.
- **Hue:** This option allows users to adjust the Hue. After the adjustment is finished, please click the “Apply” button and then it is set successfully.
- **Flip:** Please check the checkbox of the “Flip” option  Flip and then please click the “Apply” button for flipping the image that is shot by the camera.
- **Mirror:** Please check the checkbox of the “Mirror” option  Mirror and then please click the “Apply” button for mirroring the image that is shot by the camera.
- **Default:** Please click the “Default” button  for restoring the settings in this page to factory default value.




## 7.4 Audio

The Audio option allows users to set the audio related parameters. The main interface of the audio option is shown as following diagram.




Please see following section for realizing the descriptions for each item for the Audio option.

Items	Descriptions
<p>Audio Switch:</p> 	<p><b>Audio Switch</b> This option allows users to turn on or turn off the input of the audio source.</p>
<p>Audio Type:</p> 	<p><b>Audio Type</b> This allows users to select the encoding format of the input audio. The default audio type is the AAC format.</p>
<p>Sample Rate:</p> 	<p><b>Sample Rate</b> This drop-down menu allows users to select desired sample rate for the input audio source. There are two sample rate including 44.1K and 48K for users to select.</p>
<p>Bit Rate:</p> 	<p><b>Bit Rate</b> This drop-down menu allows users to select their desired Bit Rate.</p>
<p>Input Type:</p> 	<p><b>Input Type</b> This option allows users to select the audio signal input way. Users can input the audio by external connected MIC or by LINE IN.</p>

Items	Descriptions
<p>ADTS Options:</p> 	<p><b>ADTS Option</b> This drop-down menu allows users to turn on or turn off the ADTS.</p>
	<p><b>Apply Key</b> After all of the options are set, please click the “Apply” key and then all of the changes will be effective.</p>
	<p><b>Cancel Key</b> If the “Cancel” key is pressed, all of the changes will not take effect.</p>

## 7.5 System

This System option allows users to select functions including Reboot, Factory default, User/Guest Name and Password. The main interface of the System option is shown as following diagram. Please pay attention that the “Factory Default” option resumes the OSD menu rather than the Web UI to its factory default settings.

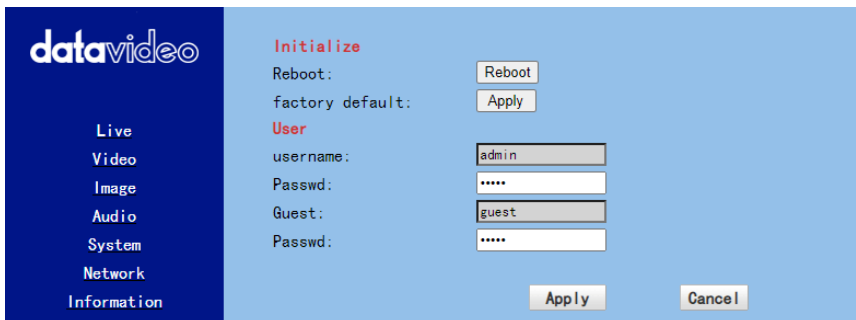

Please see following section for realizing the descriptions for each item for the System option.

Items	Descriptions
<p>Reboot: <input type="button" value="Reboot"/></p>	<p><b>Reboot</b> Press the Reboot button for rebooting the camera.</p>
<p>factory default: <input type="button" value="Apply"/></p>	<p><b>Factory Default</b> Please press the “Apply” button to set the PTC-280 to factory default value.</p>
<p><b>User</b></p> <p>username: <input type="text" value="admin"/></p> <p>Passwd: <input type="password" value="....."/></p> <p>Guest: <input type="text" value="guest"/></p> <p>Passwd: <input type="password" value="....."/></p>	<p><b>User</b> There are several items including Username, Password, Guest and Password for users to set the username and password for user and guest. After the setting is finished, please press the “Apply” button for applying the setting. The default username/Password for user is “admin/admin”.  The default Username/Password for Guest is “guest/guest”.</p>
<p><input type="button" value="Apply"/></p>	<p><b>Apply Key</b> After all of the options are set, please click the “Apply” key and then all of the changes will be effective.</p>
<p><input type="button" value="Cancel"/></p>	<p><b>Cancel Key</b> If the “Cancel” key is pressed, all of the changes will not take effect.</p>

## 7.6 Network

The Network option allows users to set many network related functions. The main interface of the Network option is shown as following diagram.

The screenshot displays the 'Network' configuration page in the datavideo interface. The left sidebar contains navigation options: Live, Video, Image, Audio, System, Network (selected), and Information. Below these are camera controls: Zoom In/Zoom Out, Focus In/Focus Out, Pan Speed (10), Tilt Speed (10), Zoom Speed (5), and Focus Speed (5). There are also buttons for Set, Call, Preset (0~254), PTZ, and Back. The Language is set to English.

The main configuration area is divided into several sections:

- LAN Settings:** IP Configuration Type (Fixed IP Address), IP Address (192.168.100.88), Subnet Mask (255.255.255.0), Gateway (192.168.100.1), DNS Address (192.168.100.1), and MAC Address (00:07:35:00:40:3A). Buttons for Apply and Cancel are present.
- Port Settings:** HTTP Port number (80), RTSP Port (554), PTZ Port (5678), UDP Port (1259), and Sony Visca (52381).
- SRT Settings:** SRT (On), SRT Mode (Listener), SRT Server (192.168.100.1), SRT Port (4578), SRT Encry (Off), SRT Password (1234567891), SRT Variable Latency (120), SRT Bandwidth Overhead (25), SRT Streamid Enable (On), and SRT Streamid (#!:\u0026uin).
- Control Protocol Settings:** Pelco-D Address (0), Pelco-P Address (0), and RTMP (O) Settings (First stream: On, Video, Audio; MRL: rtmp://192.168.100.138/live/stream0; Second stream: On, Video, Audio).
- MRL:** rtmp://192.168.100.138/live/stream1
- RTSP Settings:** RTSP Auth (On).
- ONVIF Settings:** ONVIF (On), ONVIF Auth (On).
- Multicast Settings:** Multicast (On), Address (224.1.2.3), Port (6688).
- SDK Settings:** Active Connection (On), Address (192.168.100.138), Port (1234).
- NTP Settings:** time zone (GMT+08:00: Beijing, Chongqing, Hong Kong, Urumqi), NTP time sync (On), Server address (on.ntp.org.cn), Time interval (1440 minutes), Main time show (On), Position (X: 0, Y: 0), Sub time show (On), Position (X: 0, Y: 0).

Buttons for Apply and Cancel are located at the bottom right of the configuration area.

Please see following section for realizing the descriptions for each item for the Network option.

Items	Descriptions
<p><b>Lan Settings</b></p> <p>IP Configuration Type: <input type="text" value="Fixed IP Address"/> <input type="text" value="Fixed IP Address"/> <input type="text" value="Dynamic IP Address"/></p> <p>IP Address:</p>	<p><b>IP Configuration Type</b></p> <p>This drop-down menu allows users to select the Static IP or DHCP mode. If the “Fixed IP Address” is selected, it will operate in static IP mode. If the “Dynamic IP Address” is selected, it will operate in DHCP mode.</p>
<p>IP Address: <input type="text" value="192.168.2.100"/></p> <p>Subnet Mask: <input type="text" value="255.255.255.0"/></p> <p>Gateway: <input type="text" value="192.168.2.1"/></p> <p>DNS Address: <input type="text" value="192.168.2.1"/></p>	<p><b>IP Address/Subnet Mask/Gateway/DNS Address</b></p> <p>If the fixed IP address is selected, users can set related parameters manually. After the settings are finished, please click the “Apply” button and then those settings will take effect.</p>
<p>MAC Address: <input type="text" value="D4 : E0 : BE : AB : 18 : 06"/></p>	<p><b>MAC Address</b></p> <p>This is the MAC Address and it can not be changed by users.</p>
<p>HTTP Port number: <input type="text" value="80"/> (80)</p>	<p><b>HTTP Port</b></p> <p>This is the HTTP Port and the default port No. is 80.</p>




Items	Descriptions
RTSP Port: <input type="text" value="554"/> (554)	<b>RTSP Port</b> This is the RTSP Port and the default port No. is 554.
PTZ Port: <input type="text" value="5678"/> (5678)	<b>PTZ Port</b> This is the PTZ Port No. and the default port No. is 5678.
UDP Port: <input type="text" value="1259"/> (1259)	<b>UDP Port</b> This is the UDP Port No. and the default port No. is 1259.
Sony Visca: <input type="text" value="52381"/>	<b>Sony Visca</b> This is the Sony Visca Port No. and the default No. is 52381.
SRT: <input type="radio"/> On <input checked="" type="radio"/> Off	<b>SRT On/Off</b> This allows users to turn on or turn off the SRT streaming function.
SRT Mode: <input type="text" value="Listener"/> SRT Server: <input type="text" value="Caller"/> SRT Port: <input type="text" value="1259"/>	<b>SRT Mode</b> When the SRT ON/OFF is turned on, you can select "Caller" or "Listener" mode from this drop-down menu.




Items	Descriptions
SRT Server: <input type="text" value="192.168.100.1"/>	<b>SRT Server</b> This SRT server provides an IP address for you to enter into your SRT streaming software when you are using the SRT streaming function and the PTC-280 camera is set as Listener mode and the SRT streaming software such as the Vmix is set as the Caller mode.
SRT Port: <input type="text" value="4578"/>	<b>SRT Port</b> This is the SRT port and the default port No. is 4578.
SRT Encry: <input type="text" value="Off"/> <ul style="list-style-type: none"> <li>Off</li> <li style="background-color: #e0e0e0;">Off</li> <li>AES-128</li> <li>AES-192</li> <li>AES-256</li> </ul>	<b>SRT Encry</b> When the SRT function is turned on, this option allows users to select their desired SRT Encryption way. There are three encryption ways including AES-128, AES-192 and AES-256 for users to select.
SRT Password: <input type="text" value="1234567891"/> (SRT Password length greater than 9 bits)	<b>SRT Password</b> When the SRT encryption way is set, it is needed for users to use this password. The default value is 1234567891 and this password can change by users.
SRT Variable Latency: <input type="text" value="120"/> (20 ~ 8000)	<b>SRT Variable Latency</b> This column allows you to set the transmission latency of the SRT streaming. You can set the latency within the range of 20 to 8000.



Items	Descriptions
<p data-bbox="132 121 524 156">SRT Bandwidth Overhead: <input type="text" value="25"/> (5 ~ 100)</p>	<p data-bbox="636 121 922 150"><b>SRT Bandwidth Overhead</b></p> <p data-bbox="636 156 986 1161">The Bandwidth Overhead is a percentage which is set according to the network link. You can multiply this percentage value by the encoder-encoded video and audio total bitrates to get the maximum overhead which is allowed by the Bandwidth overhead. This value plus the total value of the video and audio bitrates is the maximum value of the current SRT transmission bandwidth, which is the maximum bandwidth of this SRT channel. The purpose of the bandwidth overhead is to transfer the control message data packet which accompany the SRT streaming. Moreover, it also includes the retransmission for all of the media packets. If the network link condition is worse, more exchanges for the control message data packets and more retransmissions for the media data packets will be needed. And you need to set a higher Bandwidth Overhead value.</p>
<p data-bbox="132 1201 496 1249">SRT StreamId Enable: <input type="radio"/> On <input checked="" type="radio"/> Off</p>	<p data-bbox="636 1201 874 1230"><b>SRT Stream ID Enable</b></p> <p data-bbox="636 1236 960 1457">This option allows you to turn on or turn off the SRT Stream ID. The Stream ID is an information which can be exchanged between the SRT Caller and the SRT Listener when the SRT connection is</p>

Items	Descriptions
	<p>established. This Stream ID information allows the SRT Listener to determine whether the connection from a certain SRT Caller should be accepted or not.</p>
<p>SRT StreamId: <input type="text" value="#!::u=admin"/></p>	<p><b>SRT Stream ID</b>  This column allows you to enter the SRT Stream ID. Generally speaking, the SRT Stream ID will be provided by your CDN or cloud service platform.</p>
<p>Pelco-D Address: <input type="text" value="0"/> (0~254)</p>	<p><b>Pelco-D Address</b>  This option allows users to set the Pelco-D address, the range is from 0 to 254.</p>
<p>Pelco-P Address: <input type="text" value="0"/> (0~31)</p>	<p><b>Pelco-P Address</b>  This option allows users to set the Pelco-P Address, the range is from 0 to 31.</p>
<p><b>RTMP (S) Settings</b>  First stream: <input type="radio"/> On <input type="radio"/> Off <input checked="" type="checkbox"/> Video <input checked="" type="checkbox"/> Audio  MRL: <input type="text" value="rtmp://a.rtmp.youtube.com/live2/gfay-3jva-70a-rtmp-0grr"/></p>	<p><b>First Stream</b>  This option allows users to determine whether they want to turn on/turn off the First Stream streaming. Moreover, this option can turn on/turn off the streaming of video and audio separately.</p> <p><b>MRL</b>  Please copy the RTMP server address and streaming key from the streaming platform and then paste them into this MRL column. After that, please press the “Apply” button for</p>

Items	Descriptions
	starting the streaming successfully.
	<p><b>Second Stream</b></p> <p>This option allows users to determine whether they want to turn on/turn off the Second Stream streaming. Moreover, this option can turn on/turn off the streaming of video and audio separately.</p> <p><b>MRL</b></p> <p>Please copy the RTMP server address and streaming key from the streaming platform and then paste them into this MRL column. After that, please press the “Apply” button for starting the streaming successfully.</p>
	<p><b>RTSP Auth</b></p> <p>This option allows users to turn on or turn off the authentication of the RTSP streaming.</p>
	<p><b>ONVIF</b></p> <p>This option allows users to turn on or turn off the ONVIF function.</p>

Items	Descriptions
ONVIF Auth: <input type="radio"/> On <input checked="" type="radio"/> Off	<b>ONVIF Auth</b> This option allows users to turn on or turn off the ONVIF authentication.
Multicast: <input type="radio"/> On <input checked="" type="radio"/> Off	<b>Multicast</b> This option allows users to turn on or turn off the Multicast function.
Address: <input type="text" value="224.1.2.3"/>	<b>Address</b> This option is the address of Multicast. The default value is 224.1.2.3
Port: <input type="text" value="1234"/>	<b>Port</b> This is the Port No. of the Multicast. The default No. is 1234.
<b>SDK Settings</b> Active Connection: <input type="radio"/> On <input checked="" type="radio"/> Off	<b>SDK Settings</b> This allows users to turn on or turn off the Active Connection of the SDK Settings.
Address: <input type="text" value="192.168.100.138"/> Port: <input type="text" value="6688"/>	<b>Address/Port</b> This is the Address and Port of the SDK Settings. The Address is 192.168.100.138. The Port No. is 6688.

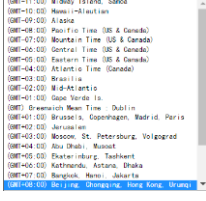Items	Descriptions
	<p><b>Time Zone</b></p> <p>This option allows users to select their time zone.</p>
<p>NTP time sync: <input checked="" type="radio"/> On <input type="radio"/> Off</p>	<p><b>NTP Time Sync</b></p> <p>This option allows users to turn on or turn off the NTP Time Sync function.</p>
<p>Server address: <input type="text" value="cn.ntp.org.cn"/></p>	<p><b>Server Address</b></p> <p>This option allows users to enter their desired NTP server.</p>
<p>Time interval: <input type="text" value="1440"/> minutes</p>	<p><b>Time Interval</b></p> <p>This option allows users to set the time interval for the time calibration.</p>
<p>Main time show: <input checked="" type="radio"/> On <input type="radio"/> Off</p> <p>Position: X <input type="text" value="0"/> Y <input type="text" value="0"/> (0~100)</p>	<p><b>Main Time Show/Position</b></p> <p>This option allows users to open or close the time display function for the main time. Moreover, users can enter different X coordinate and Y coordinate positions to determine the position for showing the time on the screen. (The allowable setting range is from 0 to 100).</p>
<p>Sub time show: <input type="radio"/> On <input checked="" type="radio"/> Off</p> <p>Position: X <input type="text" value="0"/> Y <input type="text" value="0"/> (0~100)</p>	<p><b>Sub Time Show/Position</b></p> <p>This option allows users to open or close the time display function for the sub time. Moreover, users can enter different X coordinate and Y</p>

Items	Descriptions
	coordinate positions to determine the position for showing the time on the screen. (The allowable setting range is from 0 to 100).
	<b>Apply Key</b> After all of the options are set, please click the “Apply” key and then all of the changes will be effective.
	<b>Cancel Key</b> If the “Cancel” key is pressed, all of the changes will not take effect.

## 7.7 Information



In the “Information” option, users can change the device name by themselves. Moreover, users can also see the messages including software version and webware version. The main interface of the Information option is shown as following diagram.



Please see following section for realizing the descriptions for each item for the information option.


Items	Descriptions
Device ID: <input type="text" value="HD Camera"/>	<b>Device ID</b> This column allows users to determine the device ID by themselves. What they have to do is to enter their desired device ID and then click the “Apply” button.
Software Version: <input type="text" value="SOC v9.0.1049 - ARM v7.0.22SD"/>	<b>Software Version</b> This option can show current software version.
Webware Version: <input type="text" value="v1.5.5"/>	<b>Webware Version</b> This is the version of the web-based control UI.












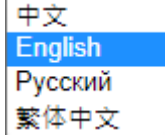
Items	Descriptions
 A rectangular button with a light blue border and a white background, containing the word "Apply" in a bold, black, sans-serif font.	<b>Apply Key</b> After all of the options are set, please click the “Apply” key and then all of the changes will be effective.
 A rectangular button with a light blue border and a white background, containing the word "Cancel" in a bold, black, sans-serif font.	<b>Cancel Key</b> If the “Cancel” key is pressed, all of the changes will not take effect.

## 7.8 The PTZ Control Area of the Web UI

PTC-280 camera's PTZ control area in the Web UI allows users to control the directions, Zoom-In, Zoom-Out, Focus Near and Focus Far parameters for the PTZ camera lens. Moreover, users can also adjust the panning, tilting speed, preset setting and preset calling functions. The PTZ control area is shown as following diagram.

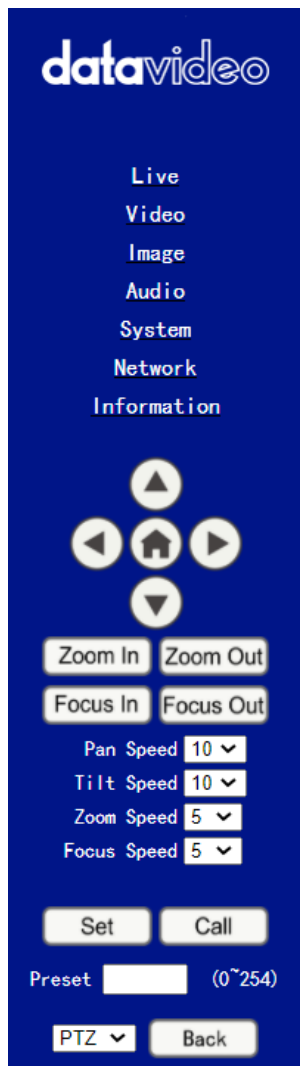

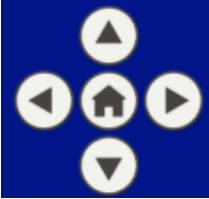Items	Descriptions
	<p><b>UP/Down/Left/Right/Home Keys</b>  Users can click the up, down, left and right keys and the PTZ camera lens will rotate to assigned direction. If the Home key  is pressed, the camera lens will return back to the initial position automatically.  If this Home key is used with the “Back” key, when the “OSD” is selected and the Back key is clicked, the OSD menu will be shown on the external connected screen and users can use the up, down, left and right keys on the Web UI to control the camera.</p>
	<p><b>Zoom In/Zoom Out/Focus In/Focus Out</b>  Click “Zoom In” or “Zoom Out” for zooming in or zooming out the camera lens.  Click the “Focus In” or “Focus Out” for Focusing Near or Focusing Far the camera lens.</p>
	<p><b>Pan Speed</b>  The “Pan Speed” allows users to adjust the rotation speed of the PTZ camera lens. The allowable setting range is from 1 to 24. The larger the number, the faster the PTZ camera lens will rotate.</p>
	<p><b>Tilt Speed</b>  The “Tilt Speed” allows users to adjust the vertical rotation speed of the camera lens. The allowable setting range is from 1 to 20. The larger the number, the faster the PTZ camera lens will rotate.</p>

Items	Descriptions
	<p><b>Zoom Speed</b></p> <p>The “Zoom Speed” allows users to adjust the Zoom In/Zoom Out speed of the PTZ camera lens. The allowable setting range is from 0 to 7. The larger the number, the faster the PTZ camera lens will rotate.</p>
	<p><b>Focus Speed</b></p> <p>The “Focus Speed” allows users to adjust the “Focus Near” and “Focus Far” speed of the PTZ camera lens. The allowable setting range is from 0 to 7. The larger the number, the faster the PTZ camera lens will rotate.</p>
	<p><b>Set and Call Presets</b></p> <p>The PTC-280 provides 255 presets (0-254) for users to set.</p> <p>Users can use “Set” button to set the preset position and users can use the “Call” button to recall the pre-saved presets.</p>
	<p><b>OSD/PTZ Drop-Down Menu</b></p> <p>Press the OSD option from the web UI allows camera to call the OSD menu immediately. If the PTZ is selected after the OSD menu is shown, the OSD menu will disappear and the screen will go back to the scene that is shot by the camera.</p>
	<p><b>Language Drop-Down Menu</b></p> <p>Users can use this drop-down menu for selecting four different languages including Traditional Chinese, русский, English and Simplified Chinese.</p>

## 8. How to Use the Web UI to Set and Call Presets

Please follow following steps for setting and recalling the presets.

### ● How to Set Preset

1. Please adjust your desired camera parameters and camera lens positions in advance.

2. Please enter your desired preset number in the “Preset”

column  (0~254).

3. Please click the “Set” button  and then the preset is set successfully.

### ● How to Recall Preset

1. Please enter the preset number that you want to recall into the “Preset”

(0~254) column.

2. Please click the “Call” button  and then the preset is recalled successfully.


## 9. Control the Camera by the PTZ View Assist App

Datavideo provides PTZ View Assist App for you to control up to 4 PTC-280 cameras by using Android or iOS handset. What you have to do is to set your handset or tablet in the same LAN with the PTZ View Assist App by the static IP address, and then you can control various functions of the camera by the Wi-Fi connection. Please download the PTZ View Assist App for the Android or iOS platform by using the following addresses.

Note: The Datavideo PTZ View Assist App can be operated only in DVIP mode. So, please remember to adjust the PTC-280 camera to the DVIP mode before using the Datavideo PTZ View Assist App.

For the Android device: Please go to “Google Play” and then search for the “PTZ View Assist”. Finally, please download and install it.


For the iOS device: Please go to “App Store” and then search for the “PTZ View Assist”. Finally, please download and install it.

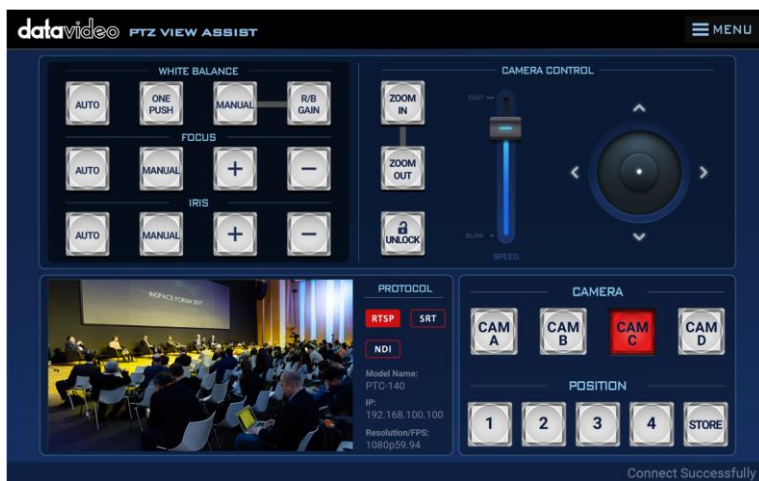

# 10. DIP Switch Settings

## 10.1 DIP Switch SW1


The DIP Switch SW1 can be found at the bottom of the camera, where the user is allowed to set the camera's VISCA ID, enable remote control, select the video resolution, and configure how the video mode can be selected.

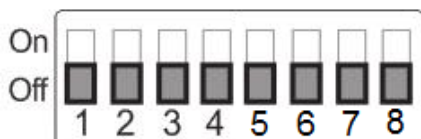

DIP SW 1/2/3	VISCA ID
(1,2,3) = (ON,OFF,OFF)	VISCA-ID 1
(1,2,3) = (OFF,ON ,OFF)	VISCA-ID 2
(1,2,3) = (ON ,ON ,OFF)	VISCA-ID 3
(1,2,3) = (OFF,OFF,ON)	VISCA-ID 4
(1,2,3) = (ON ,OFF,ON)	VISCA-ID 5
(1,2,3) = (OFF,ON ,ON)	VISCA-ID 6
(1,2,3) = (ON ,ON ,ON)	VISCA-ID 7
DIP SW 4	Remote Control Protocol
ON	DVIP
OFF	RS-422
DIP SW 5/6/7	Resolution
(5,6,7) = (OFF,OFF,OFF)	1920 x 1080i 59.94
(5,6,7) = (ON,OFF,OFF)	1920x1080i50
(5,6,7) = (OFF,ON,OFF)	1920 x 1080p 59.94
(5,6,7) = (ON,ON,OFF)	1920 x 1080p 50
(5,6,7) = (OFF,OFF,ON)	3840 x 2160p 29.97
(5,6,7) = (ON,OFF,ON)	3840 x 2160p 25
(5,6,7) = (OFF,ON,ON)	3840 x 2160p 59.94
(5,6,7) = (ON,ON,ON)	3840 x 2160p 50
DIP SW 8	Video Mode Selection Method
ON	Video mode selectable by DIP switch only
OFF	Video mode selectable by menu

## 10.2 DIP Switch SW2 (IRID)

The IRID DIP Switch can be found on the rear panel of the PTC-280 camera. This DIP switch allows the user to assign an ID number to the camera so that the user can navigate between the cameras by pressing the **CAMERA SELECT** buttons.




DIP SW 1/2	Camera Select Function (IR Remote Control) – Camera ID Assignment
(1,2) = (OFF,OFF)	CAM1 (IR)
(1,2) = (ON,OFF)	CAM2 (IR)
(1,2) = (OFF,ON)	CAM3 (IR)
(1,2) = (ON,ON)	CAM4 (IR)
<b>* DIP SW 3/4 should be always OFF.</b>	



# 11. How to Play the RTSP Stream by the VLC Player

Please follow following steps for playing the RTSP streaming by using the VLC Player.

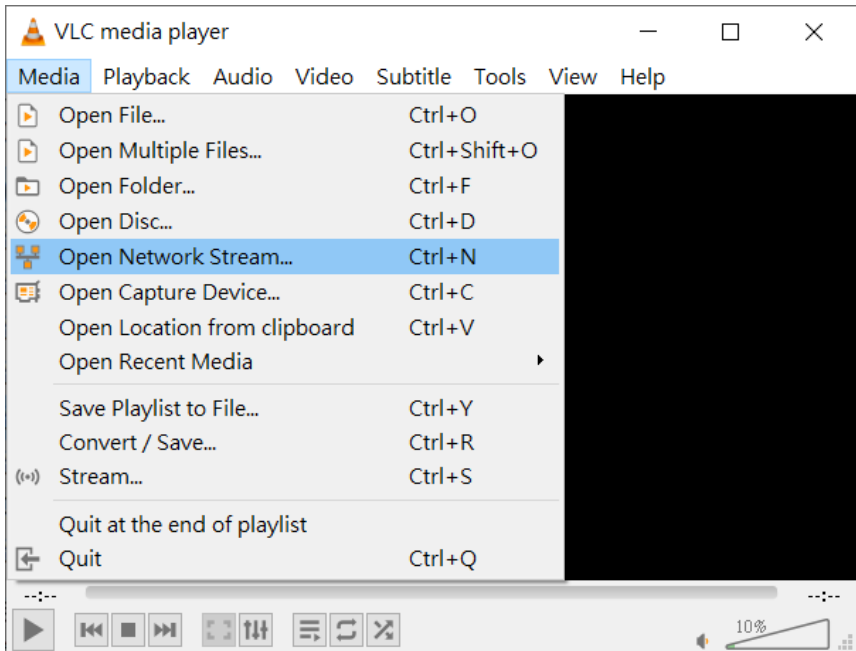


1. Please open the VLC Player.
2. Please click "Media-> Open Network Stream".

3. Please enter the RTSP address.


rtsp://ip address: port No./1 (first stream).

rtsp://ip address: port No./2 (second stream).

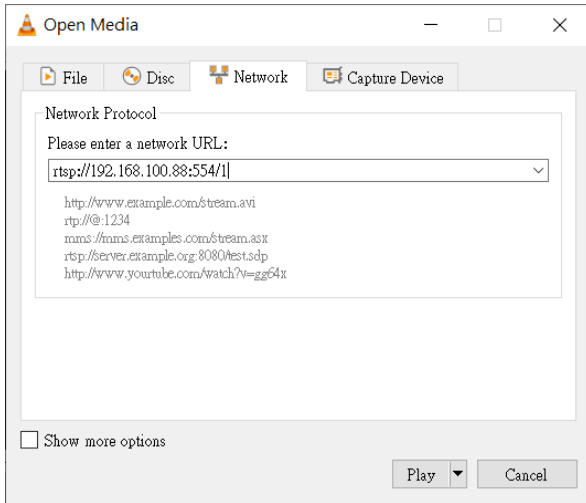


4. Please click “Play” button.

Note: The default port No. of the RTSP is 554, if the default http port of the camera is 80, it is no need for users to enter the port No.

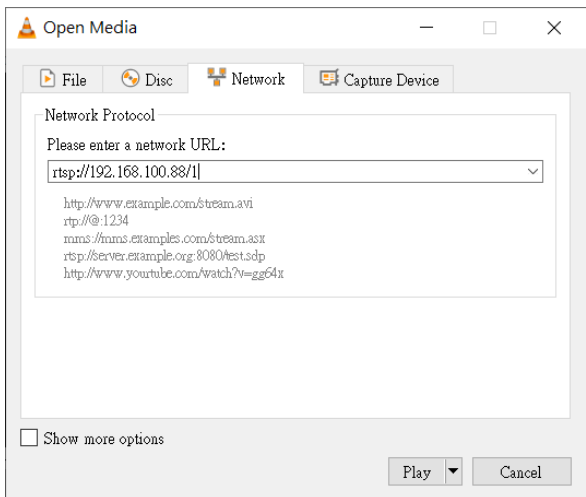

## 12. How to Play the Multicast by the VCL Player


The RTP Multicast allows users to view the camera image remotely by specific video player such as the VLC Player.

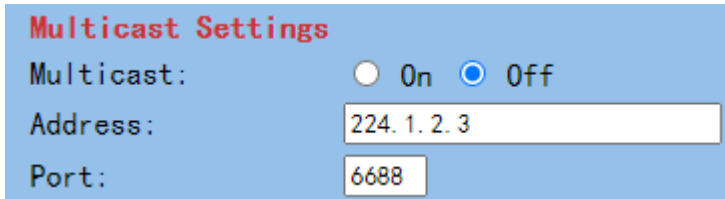

The image shows a dialog box titled "Multicast Settings" with a blue background. It contains three fields: "Multicast:" with radio buttons for "On" (unselected) and "Off" (selected); "Address:" with a text input field containing "224. 1. 2. 3"; and "Port:" with a text input field containing "6688".

Please follow following steps for playing the RTP Multicast in the VLC Player.

1. Download VLC media player from the link <https://www.videolan.org>.
2. Open VLC, click “Media” → “Open Network Stream” then enter **rtp://224.1.2.3:6688** to view the first stream and **rtp://224.1.2.3:6690** to view the second stream.

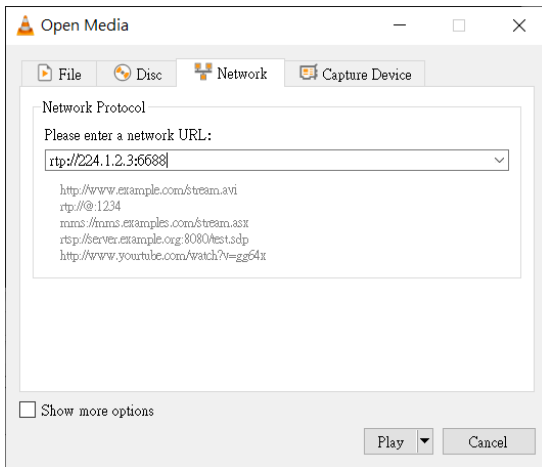

3. Click the “Play” button to start viewing the video stream.

# 13. How to Stream to Facebook


Please follow following steps for streaming to Facebook Streaming platform.

- **Use Facebook Live Producer for Streaming**

1. Please go to Facebook Live website


<https://www.facebook.com/formedia/solutions/facebook-live> , and then

please click “Go Live Now” button which is shown in the following diagram.

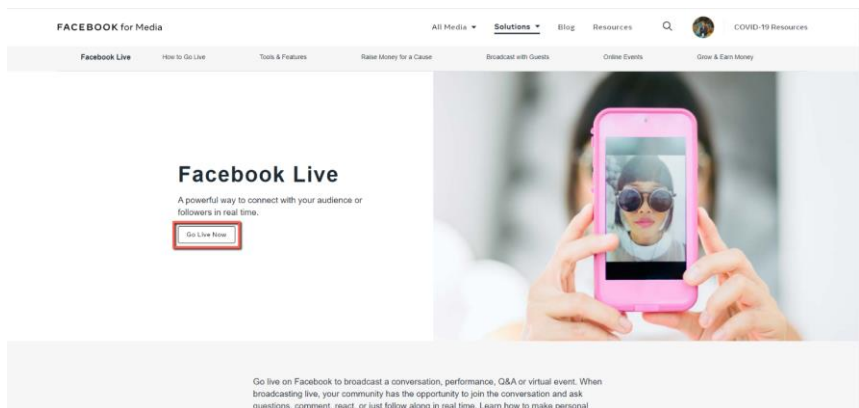


**Note:** Facebook Live limits each stream to 8 hours.


2. Please click the “Select” button from the “Go live” option which is shown in the following diagram.

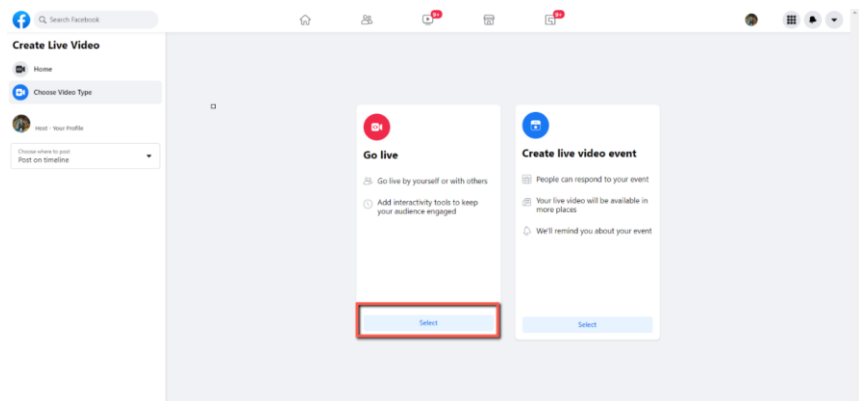



3. Please select the “Streaming Software” option, and then please enter the title and description of your live-streaming video in the “Title” and “Description” columns. Moreover, you can determine whether you want to share your live-streaming video to your Facebook Story.

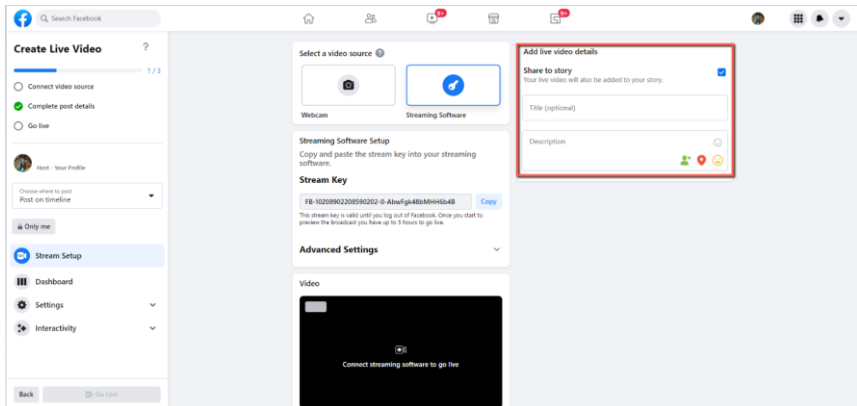

4. Please select “Advanced Settings”, and then you can see the “Server URL”. You need the “Server URL” and the “Stream Key” which are on the page for live-streaming videos on the Facebook page.

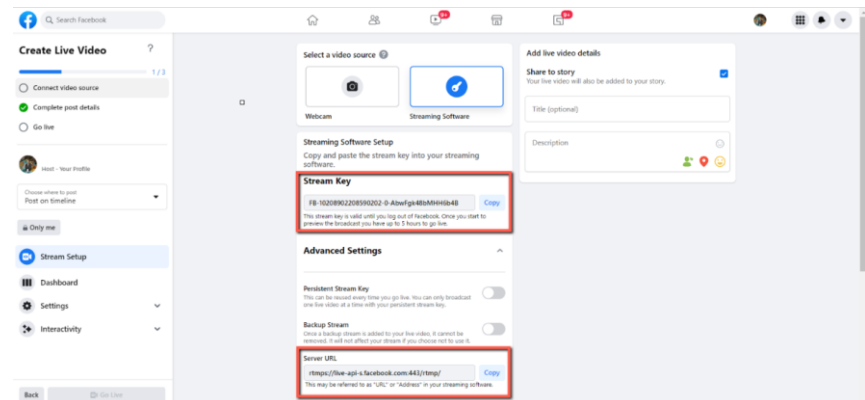


5. Please click the “Copy” buttons which are located next to the “Server URL” and “Stream Key” columns respectively. After that, please paste them to the “First Stream MRL” column in the “Network” option of the PTC-280 web UI.

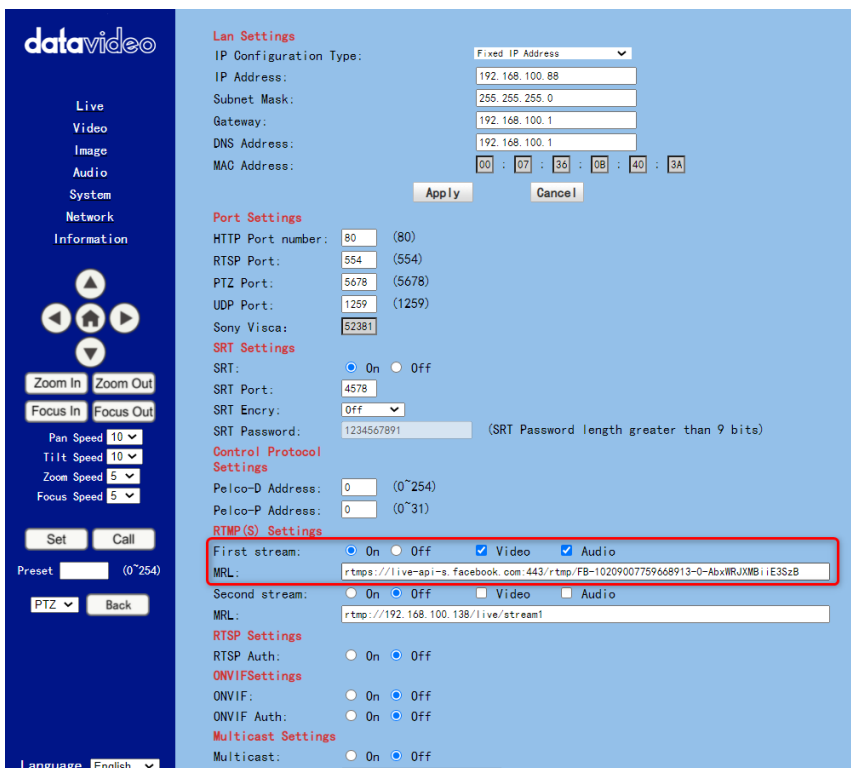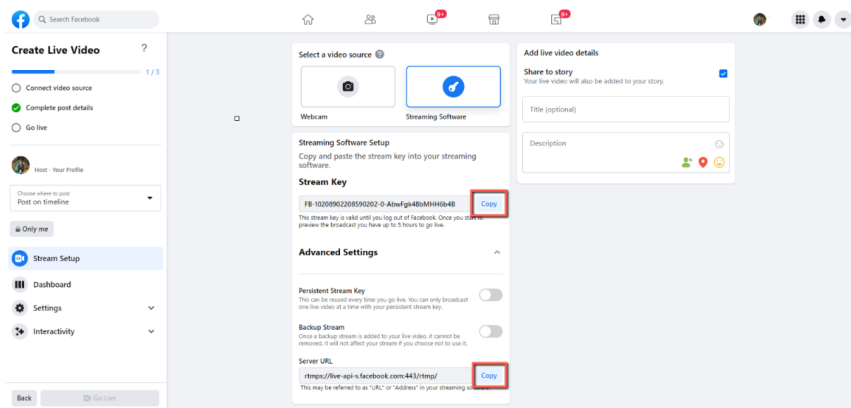

Note: Please make sure that the “ON” is selected for the First Stream MRL . Moreover, please make sure that the “Video” and “Audio” checkboxes are checked.

6. Please click the “Apply” button .

7. Please click the “Reboot” button in the “System” option to reboot the PTC-280.

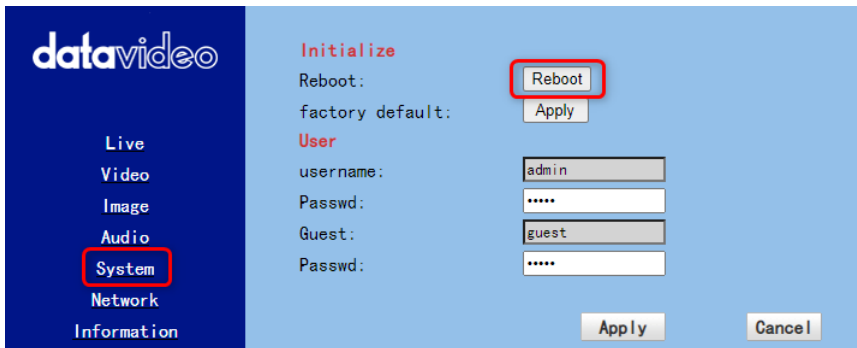


192.168.50.30




the ipcam will be rebooted. Are you sure?



8. After the PTC-280 is rebooted, you can see the real-time preview which is shot by the PTC-280 camera from the “Video” option of the Facebook Live page.

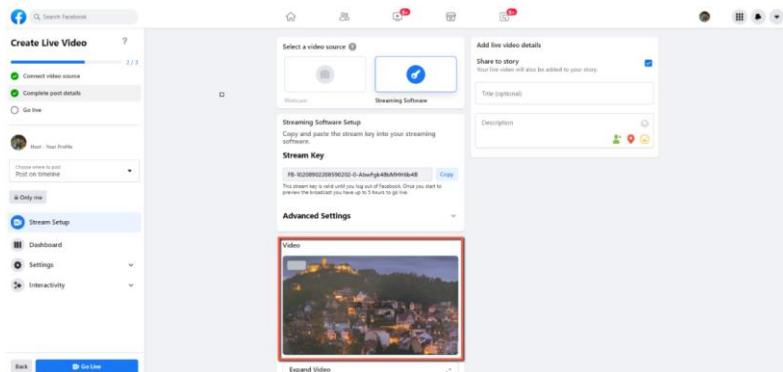


9. Please set related settings including “Choose where to post” and “Select audience”. After that, please press the “Go Live” button for live-streaming the real-time image which is shot by the PTC-280 immediately.

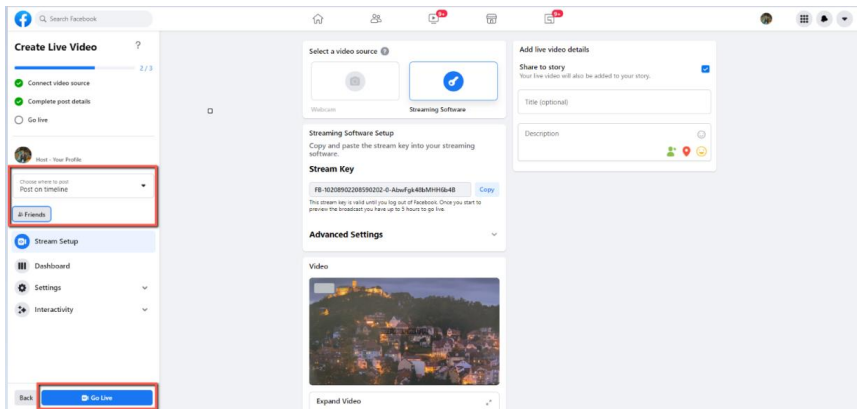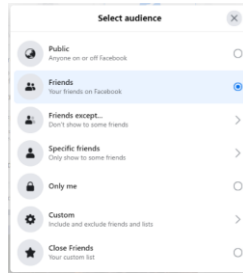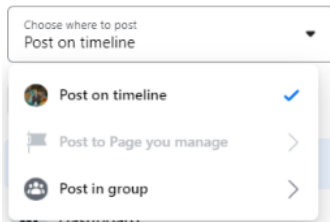




10. And then you can see that the live-streaming is done successfully. If you want to stop the live-streaming, please click the “End Live Video” button for stopping the live-streaming immediately.

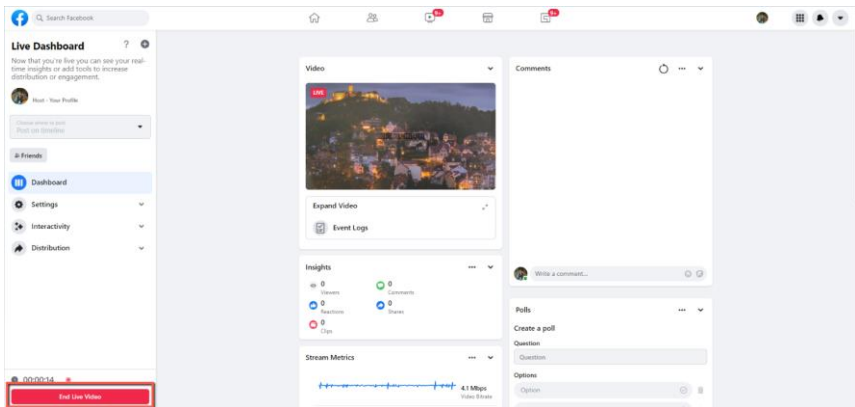


- **Use the Personal Facebook Page or the Facebook Fan Page for Streaming**


1. Please click “Live Video” from your Facebook Personal Page or Facebook Fan Page.




2. Please click the “Select” button from the “Go live” option which is shown in the following diagram.

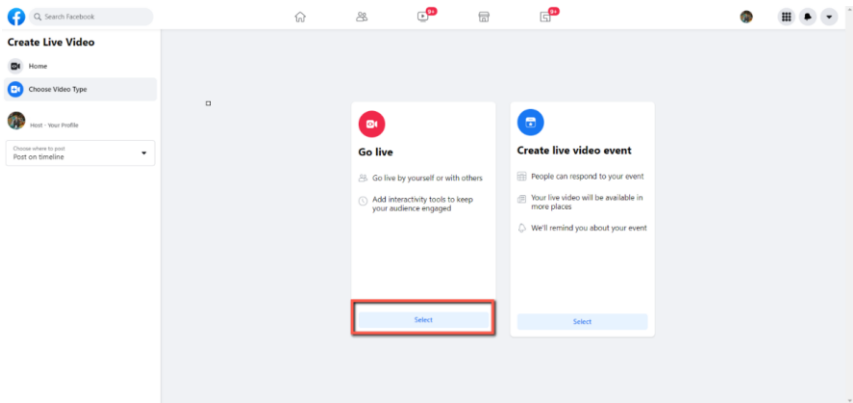


3. Please select the “Streaming Software” option, and then please enter the title and description of your live-streaming video in the “Title” and “Description” columns. Moreover, you can determine whether you want to share your live-streaming video to your Facebook Story.

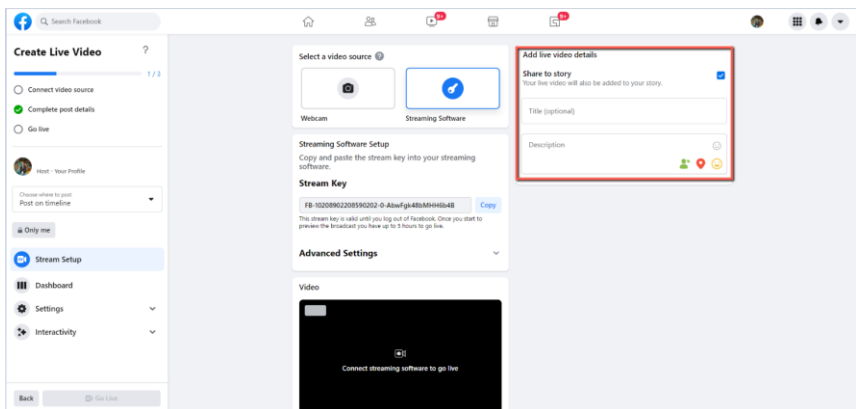

4. Please select “Advanced Settings”, and then you can see the “Server URL”. You need the “Server URL” and the “Stream Key” which are on the page for live-streaming videos on the Facebook page.

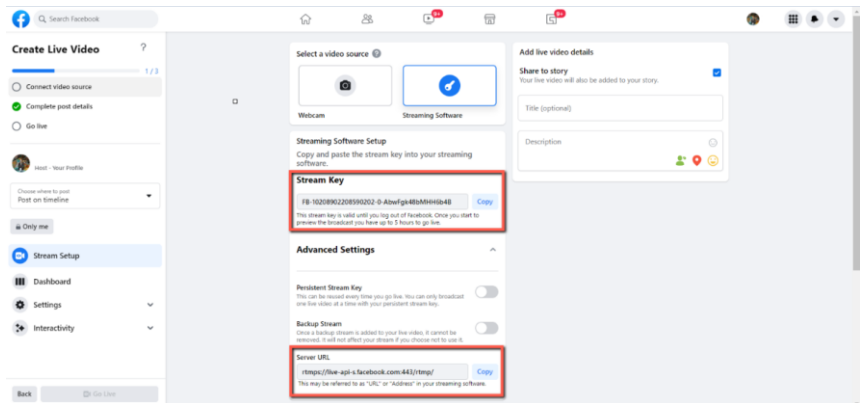

5. Please click the “Copy” buttons which are located next to the “Server URL” and “Stream Key” columns respectively. After that, please paste them to the “First Stream MRL” column in the “Network” option of the PTC-280 web UI.

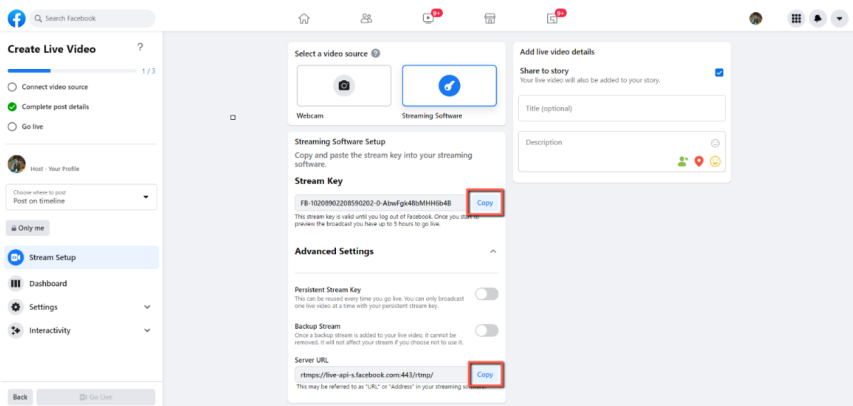

**datavideo**

Live  
Video  
Image  
Audio  
System  
Network  
Information

Zoom In Zoom Out  
Focus In Focus Out  
Pan Speed 10  
Tilt Speed 10  
Zoom Speed 5  
Focus Speed 5

Set Call  
Preset (0~254)  
PTZ Back  
Language English

**Lan Settings**  
IP Configuration Type: Fixed IP Address  
IP Address: 192.168.100.88  
Subnet Mask: 255.255.255.0  
Gateway: 192.168.100.1  
DNS Address: 192.168.100.1  
MAC Address: 00 : 07 : 36 : 0B : 40 : 3A  
Apply Cancel

**Port Settings**  
HTTP Port number: 80 (80)  
RTSP Port: 554 (554)  
PTZ Port: 5678 (5678)  
UDP Port: 1259 (1259)  
Sony Visca: 52381

**SRT Settings**  
SRT:  On  Off  
SRT Port: 4578  
SRT Encry: Off  
SRT Password: 1234567891 (SRT Password length greater than 9 bits)

**Control Protocol Settings**  
Pelco-D Address: 0 (0~254)  
Pelco-P Address: 0 (0~31)

**RTMP(S) Settings**  
First stream:  On  Off  Video  Audio  
MRL: rtmps://live-api-s.facebook.com:443/rtmp/FB-10209007759668913-0-AbxNRJXMBiE3SzB  
Second stream:  On  Off  Video  Audio  
MRL: rtmp://192.168.100.138/live/stream1

**RTSP Settings**  
RTSP Auth:  On  Off


**ONVIF Settings**  
ONVIF:  On  Off  
ONVIF Auth:  On  Off

**Multicast Settings**  
Multicast:  On  Off

Note: Please make sure that the “ON” is selected for the First Stream MRL . Moreover, please make sure that the “Video” and “Audio” checkboxes are checked.


6. Please click the “Apply” button .

7. Please click the “Reboot” button in the “System” option to reboot the PTC-280.

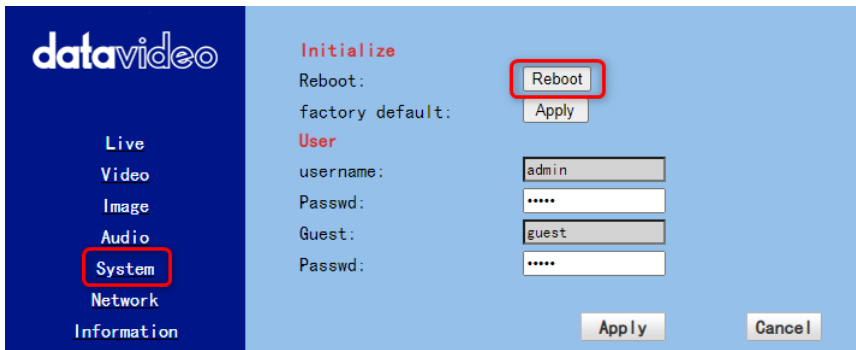


192.168.50.30



the ipcam will be rebooted. Are you sure?




8. After the PTC-280 is rebooted, you can see the real-time preview which is shot by the PTC-280 camera from the “Video” option of the Facebook Live page.

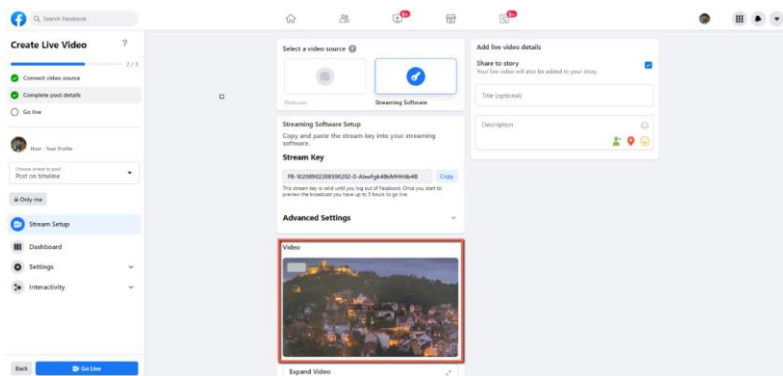

9. Please set related settings including “Choose where to post” and “Select audience”. After that, please press the “Go Live” button for live-streaming the real-time image which is shot by the PTC-280 immediately.

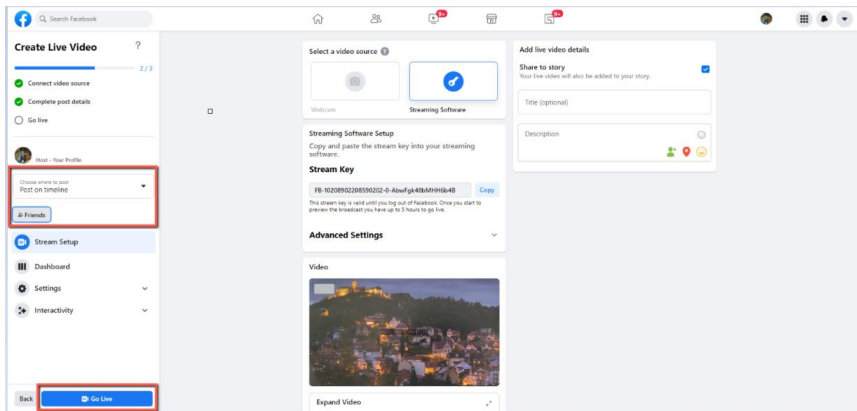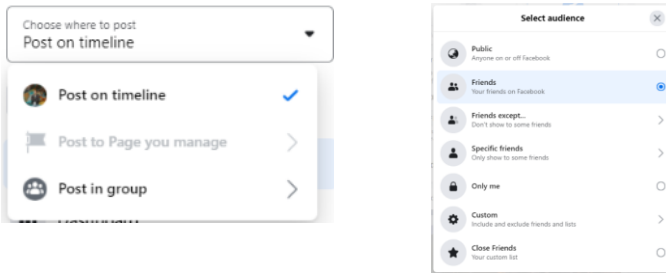


10. And then you can see that the live-streaming is done successfully. If you want to stop the live-streaming, please click the “End Live Video” button for stopping the live-streaming immediately.

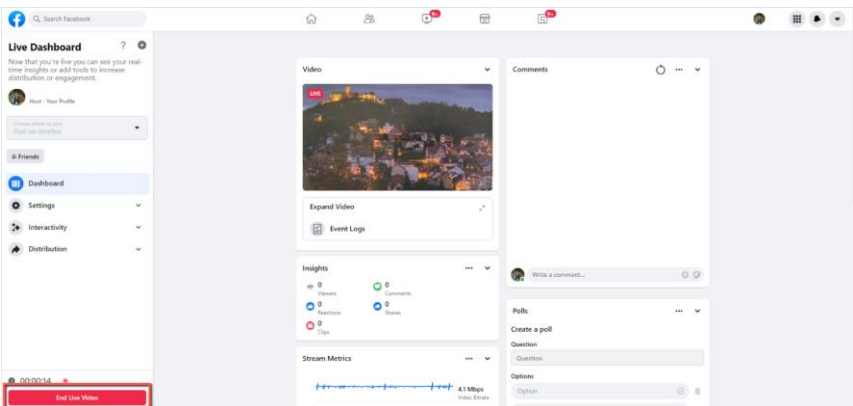


# 14. How to Stream to Youtube

Please see following steps for realizing how to stream to Youtube streaming platform.

1. Please go to Youtube website [www.youtube.com](http://www.youtube.com) and then click “Create->Go Live”.


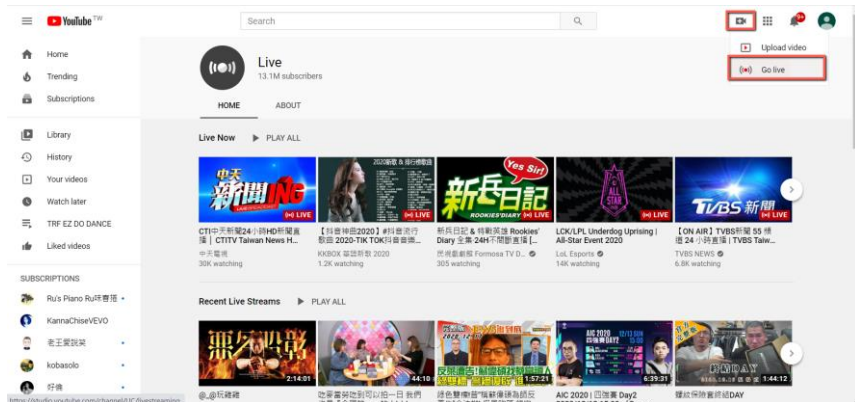


2. Users will enter “Youtube Live Control Room” page, please click the “START” button from the “Right Now” option.

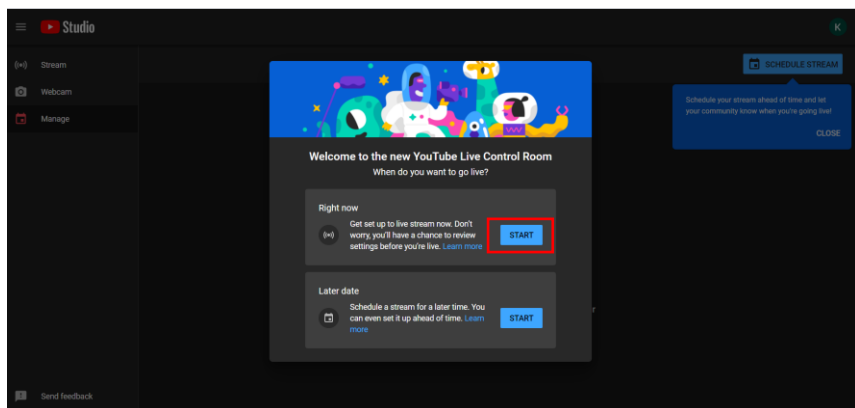



3. Please click **“Go”** button from the **“Streaming Software”** option.

4. Users will see the main page of the **“Youtube Studio”**. Please click the **“EDIT”** button for setting detail information of your streaming activity. After you finish filling out those information, please click the **“SAVE”** button.

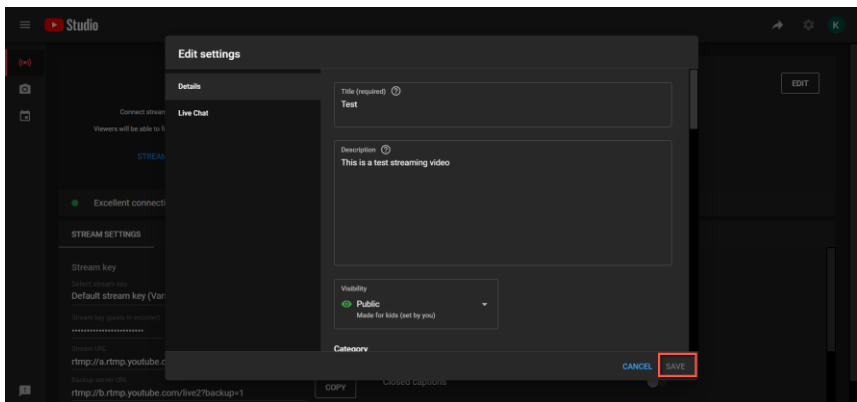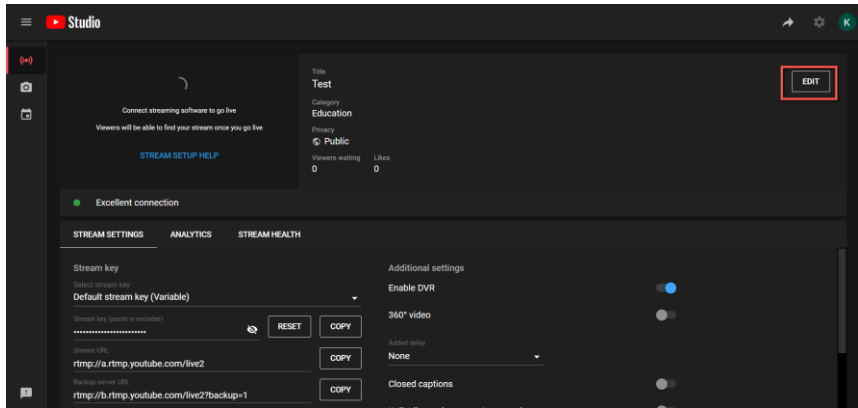




5. Users can see the Stream Key and Stream URL that are provided by the Youtube streaming platform. Please copy the stream key and stream URL and then paste them into the “**First Stream MRL**” within the “**Network**” option of the PTC-280 Web UI. Please click “**On**” and please check the checkboxes of “**Audio**” and “**Video**”.

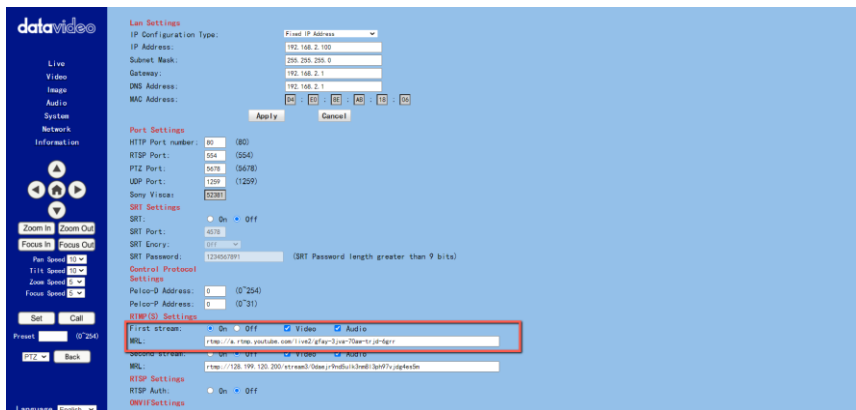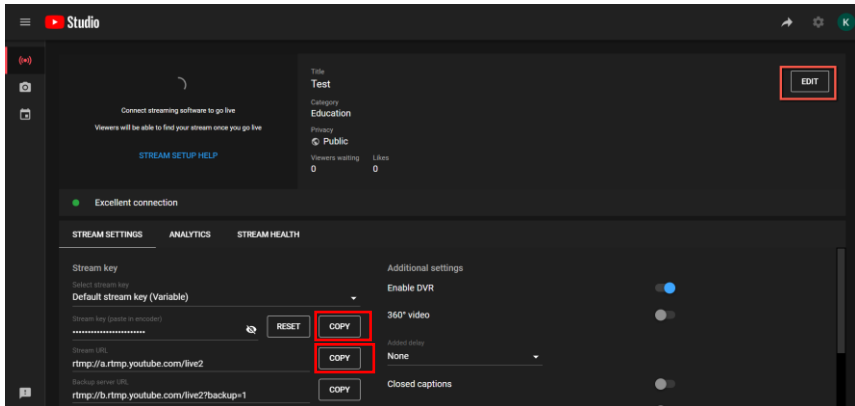

6. Please click the “Apply” button.



7. Please reboot the PTC-280 camera and then users can see the streaming is started on the Youtube Live page. If you want to stop the live streaming, please click the “END STREAM” button for stopping the live streaming.

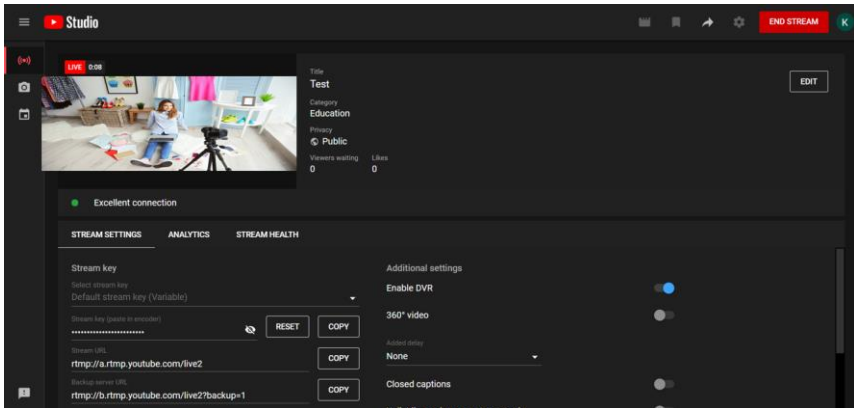



# 15. How to do the SRT Streaming by the vMix Software

## How to install the Vmix Software


Please install the vMix software according to following steps.

1. At first, please go to vMix official website and then download the vMix 60-day free-trial. This section will use vMix free-trial as an example to demonstrate the operation steps. Please click the “DOWNLOAD FREE TRIAL” button for downloading.

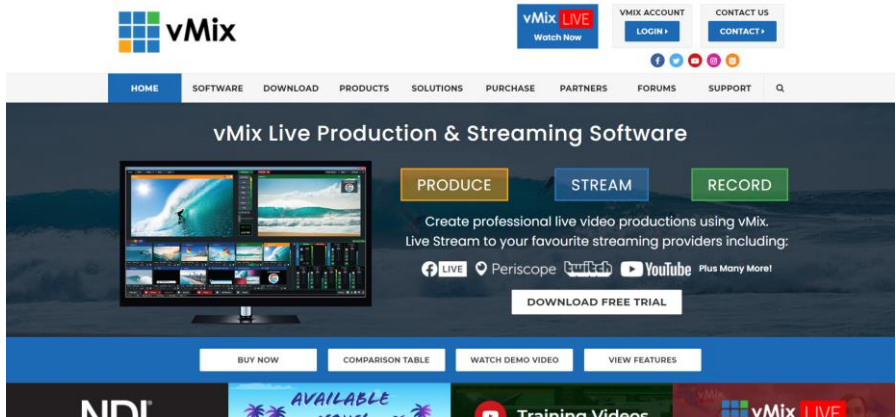


2. Please double-click the vmix23.exe  vmix23 .


3. Please click the “Next” button.

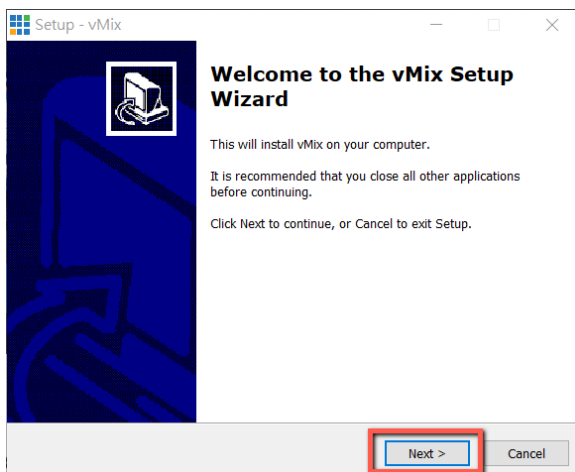


4. Please click “I accept the agreement” and then click the “Next” button.

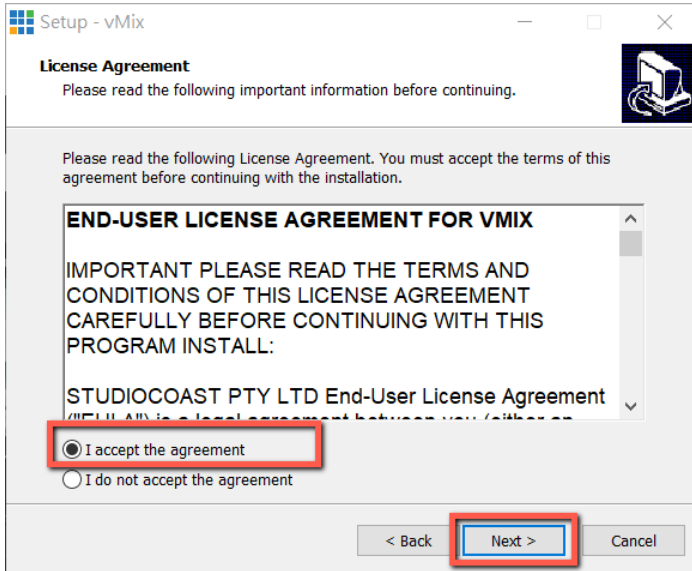


5. Please click the “Next” button.

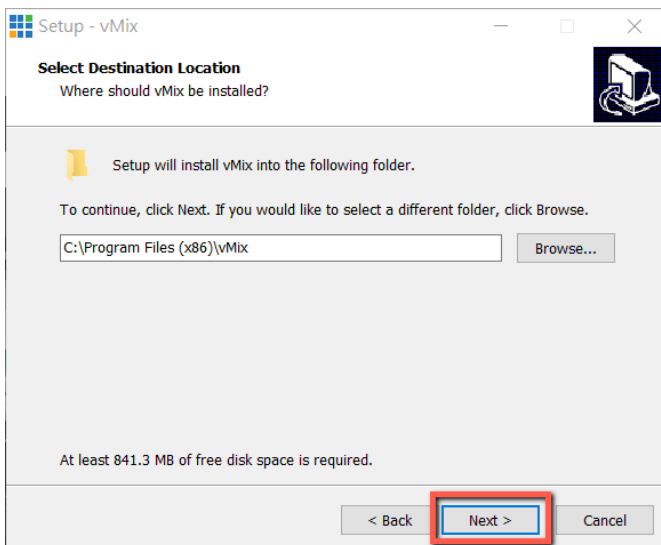


6. Please click the “Next” button.

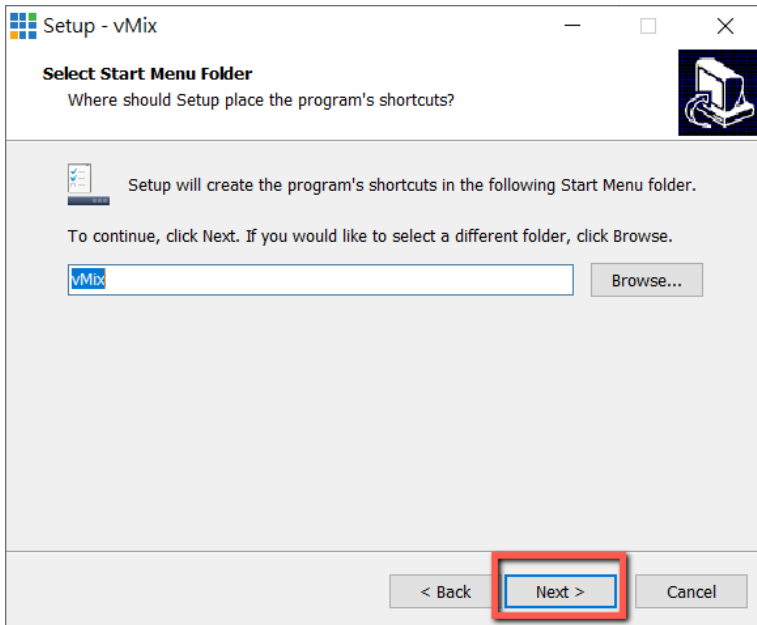


7. Please click the “Next” button.

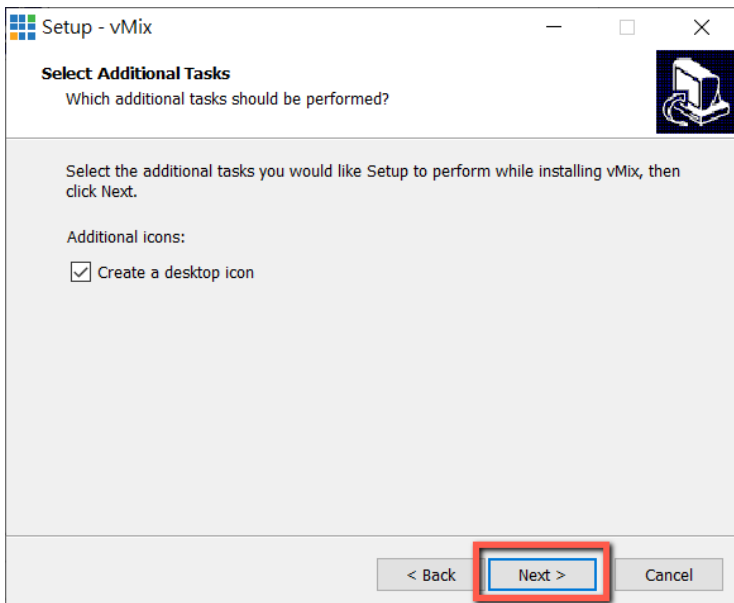


8. Please click the “Install” button.

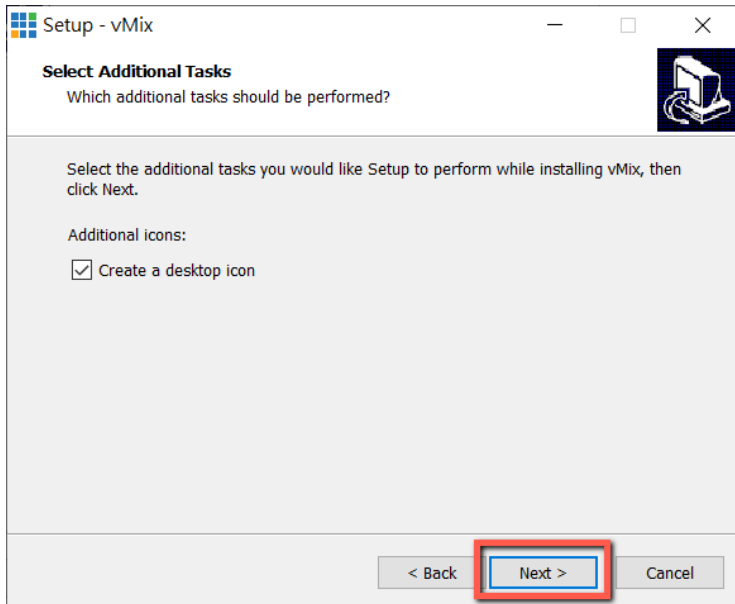


9. The installation will be started.

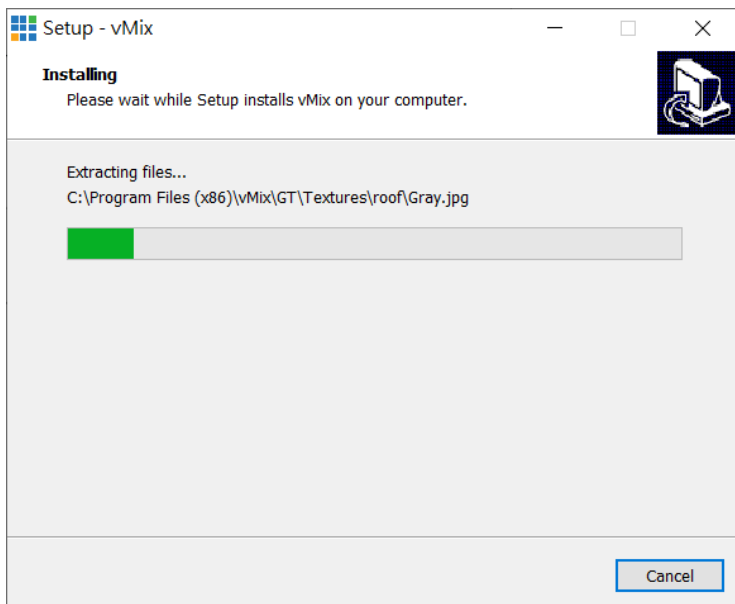


10. Please click the “Finish” button to finish the installation.

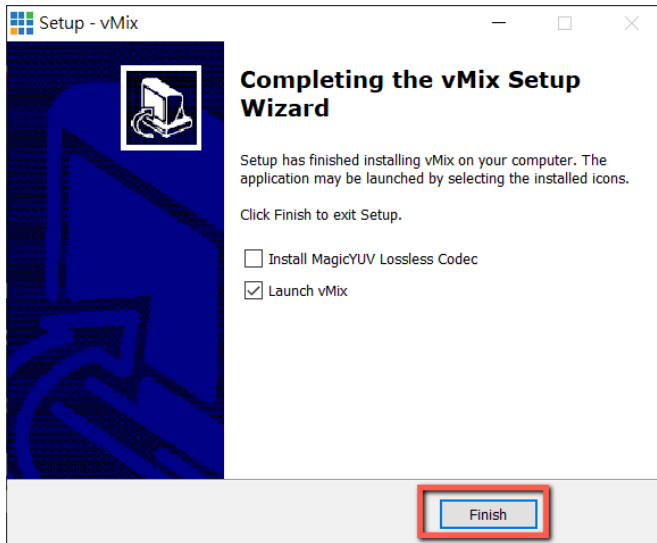


11. Please select “Register for a fully functional 60 Day Trial” to fill out your Email Address. After that, please click the “OK” button to open the vMix software.

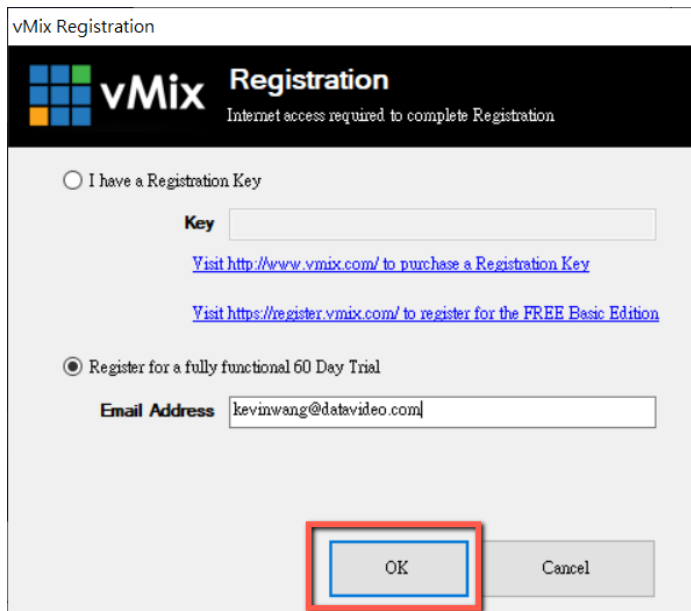

12. Please select the initial resolution and frame rate that you want to use and then please click the “OK” button.

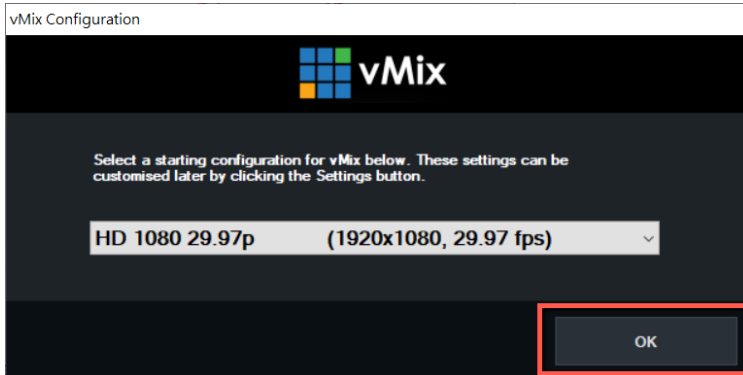

13. After opening vMix, the software interface is shown as following diagram.

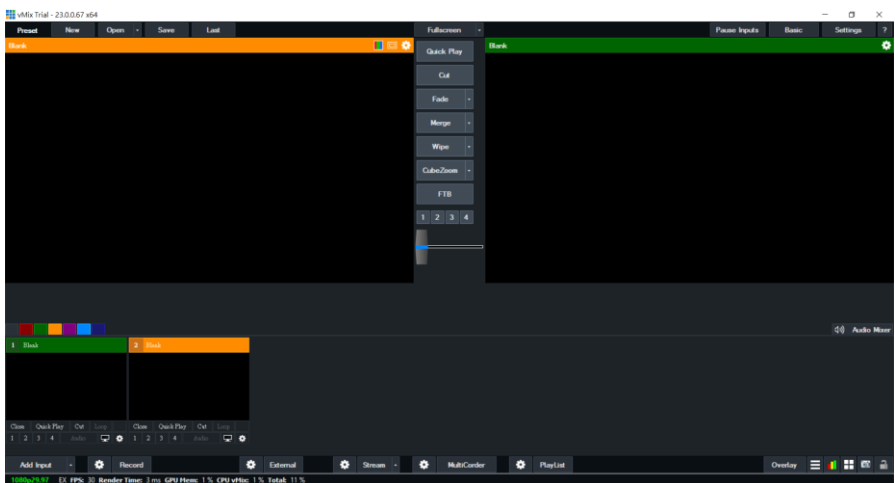




## ***How to do the SRT Stream by Using the PTC-280 Camera and vMix Software***


There are two modes for the SRT streaming including the Caller Mode and the Listener Mode. Please see following steps for realizing operation steps for the vMix.

### **If the PTC-280 is set in Listener Mode**

1. At first, please click the “vMix(x64)” from the Start Menu to open the Vmix software.

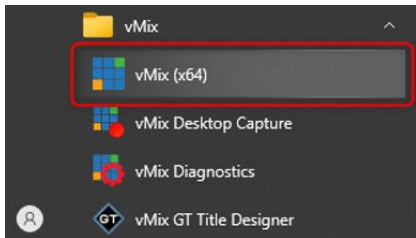


2. After that, you will see the Vmix main interface which is shown in the following diagram.

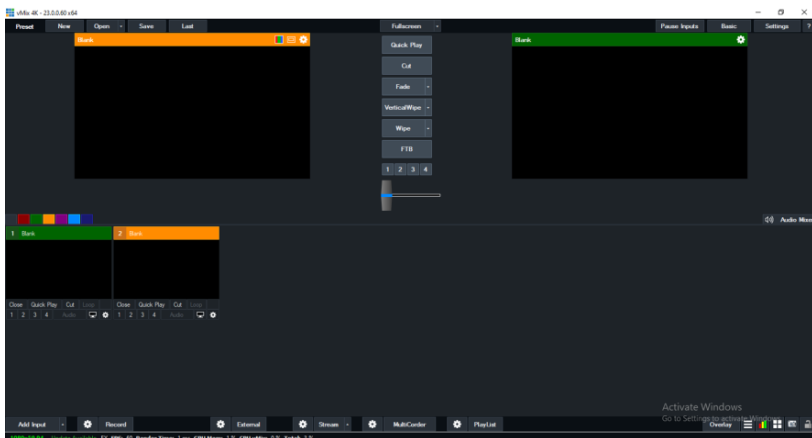


3. Please go back to the PTC-280 interface to make sure that the “SRT” option in the SRT Settings is “ON”. Moreover, the default value of the “SRT Port” is “4578”. The “SRT Encry” drop-down menu allows you to select your desired SRT Encryption way including AES-128, AES-192 and AES-256. The default value of the “SRT Encry” option is “Off”. In this section, we will take AES-256 as an example. If you need to set an SRT password, please enter your desired SRT password in the “SRT Password” column, it needs a 10-digit or above number. The default SRT Password is “1234567891”. After the setting for the SRT Password is finished, please press the “Apply” button which is located on the bottom side of the Web UI to apply the new setting.

The screenshot displays the datavideo PTC-280 web interface. On the left is a navigation sidebar with options: Live, Video, Image, Audio, System, Network, Information. Below these are navigation buttons: Zoom In, Zoom Out, Focus In, Focus Out, Pan Speed, Tilt Speed, Zoom Speed, Focus Speed, Set, Call, Preset (0~254), PTZ, and Back. The main content area is titled 'Lan Settings' and includes fields for IP Configuration Type (Fixed IP Address), IP Address (192.168.100.88), Subnet Mask (255.255.255.0), Gateway (192.168.100.1), DNS Address (192.168.100.1), and MAC Address (00:07:36:08:40:3A). Below this is the 'Port Settings' section with fields for HTTP Port number (80), RTSP Port (554), PTZ Port (5678), UDP Port (1259), and Sony Visca (52381). The 'SRT Settings' section, highlighted with a red box, contains: SRT (radio buttons for On and Off), SRT Port (4578), SRT Encry (Off), and SRT Password (1234567891) with a note '(SRT Password length greater than 9 bits)'. Other sections include 'Control Protocol Settings' (Pelco-D and Pelco-P addresses), 'RTMP(S) Settings' (First and Second stream options), 'RTSP Settings' (RTSP Auth), 'ONVIF Settings' (ONVIF and ONVIF Auth), and 'Multicast Settings' (Multicast).


4. Please go back to the main interface of the Vmware software and then press the “Add Input” button. After that, please select the “More” option from the drop-up menu.

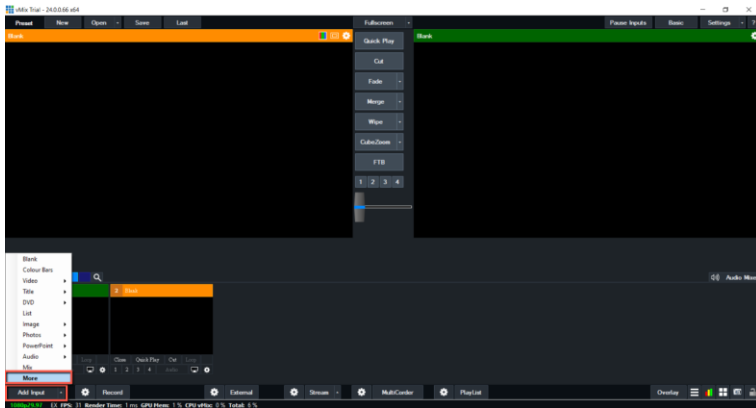


5. After the “Input Select” option is opened, please select the “Stream/SRT” option and then you can see the “Stream/SRT” interface which is shown in the following diagram.

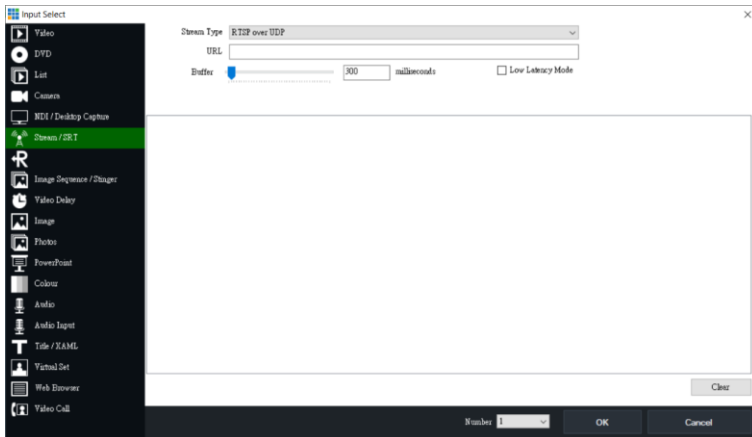

6. Please select the “SRT Caller” option from the “Stream Type” drop-down menu. After that, please enter the default static IP address “192.168.100.88” of the PTC-280 into the “Hostname” column. Moreover, please enter the default SRT port number “4578”, which is provided by PTC-280 web UI’s “SRT Port” column into the “Port” column. After that, please enter your SRT Password which is set in the PTC-280 web UI into the “Passphrase” column. The default password is “1234567891”. For the “Key Length”, please select “32” from the drop-down menu. After all of the values are entered, please press the “OK” button.

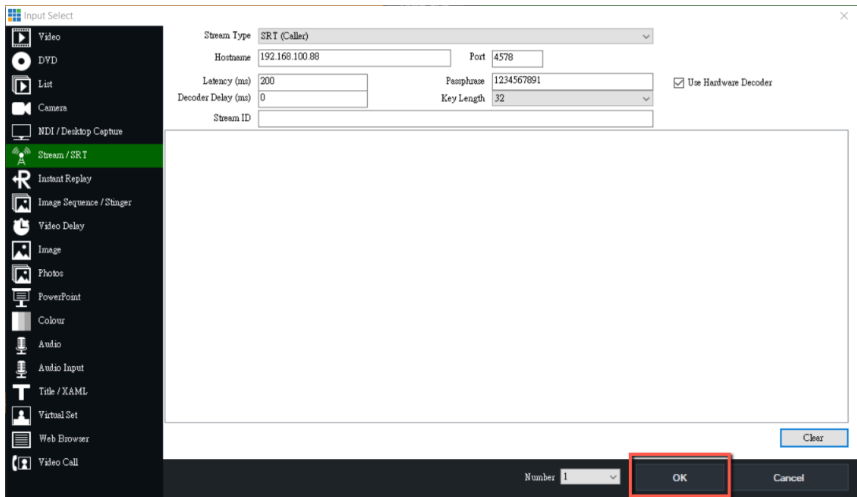

7. After that, you can see that the image which is shot by the PTC-280 is streamed to the vMix software by the SRT Listener Mode successfully.

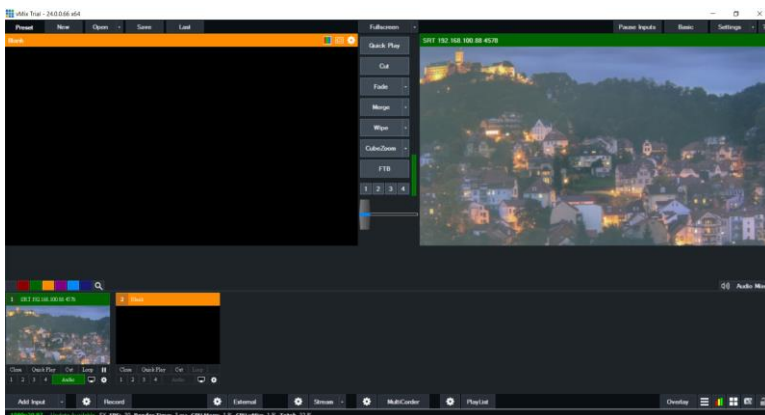


## If the PTC-280 is set in Caller Mode

1. At first, please click the “Vmix(x64)” from the Start Menu to open the Vmix software.



2. After that, you will see the Vmix main interface which is shown in the following diagram.

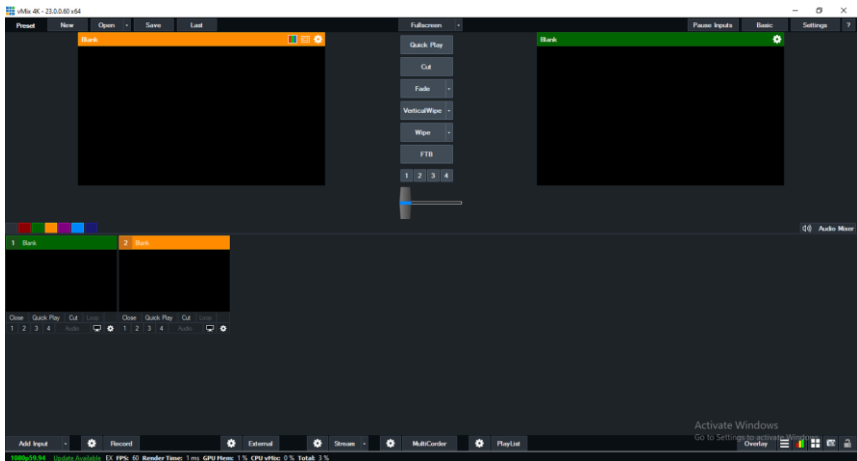

3. At first, please go back to the PTC-280 web UI and then please click “ON” from the “SRT” option.



4. Please select “Caller” from the “SRT Mode” drop-down menu.



5. Please enter the static IP address of your device which is used to install the vmix software. In this example, it is the static IP address “192.168.100.30” of the PC which is used to install the Vmix software. Please pay attention that the static IP address of the device must be within the same LAN as the static IP address of the PTC-280.

SRT Server:	<input type="text" value="192.168.100.30"/>
SRT Port:	<input type="text" value="9000"/>

6. The SRT port is “9000”, which is the default SRT port number of the PTC-280.

7. Please select your desired SRT Encryption way from the “SRT Encry” drop-down menu. In this example, we will take the AES-256 as an example.

SRT Encry:	<input type="text" value="AES-256"/>
SRT Password:	<input type="text" value="Off"/>
SRT Variable Latency:	<input type="text" value="AES-128"/>
SRT Bandwidth Overhead:	<input type="text" value="AES-192"/>
SRT StreamId Enable:	<input type="text" value="AES-256"/>

8. Please enter your desired SRT password in the “SRT Password” option. Please pay attention that the password must be a 10-digit or above number. In this example, we will take “1234567890” as an example.

SRT Encry:	<input type="text" value="AES-256"/>
SRT Password:	<input type="text" value="1234567890"/> (SRT Password length greater than 9 bits)


9. Please press the “Apply” button.

<input type="button" value="Apply"/>
--------------------------------------


10. Please press the “Reboot” button from “System-> Reboot” from the PTC-280 web UI.

<b>Initialize</b>
Reboot: <input type="button" value="Reboot"/>

11. Please go back to the Vmix interface, press the “More” option by pressing the “Add Input” option. After that, please select the “Stream/SRT” option. Please select “SRT Listener” from the “SRT Type” option. After that, please enter the default port number “9000” which is provided by the PTC-280 web UI into the “Port” column. Moreover, please enter your SRT password which is set in the PTC-280 web UI into the “Passphrase” column. In this example, we will take “1234567890” as an example. After that, please select “32” from the “Key Length” drop-down menu. If you have an SRT Stream ID which is provided by your cloud streaming platform, please enter your SRT Stream ID in the “Stream ID” column. After all of them are entered, please press the “OK” button.

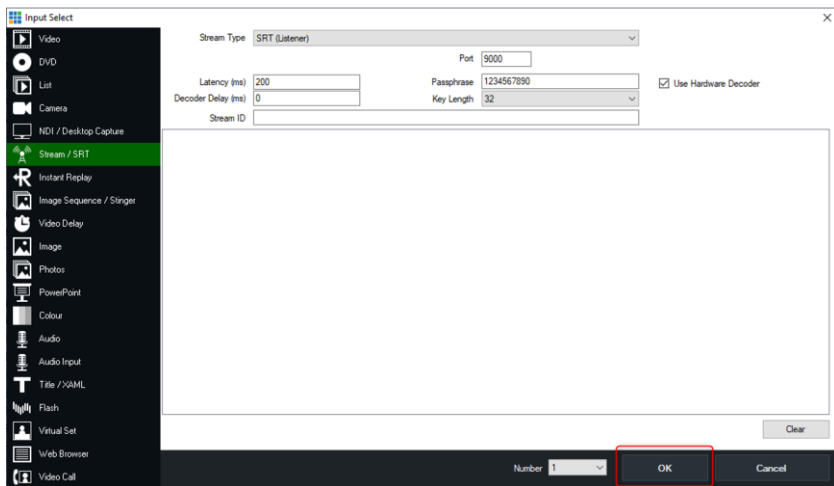


12. You can see that the image which is shot by the PTC-280 is shown in the Vmix software by Caller Mode.

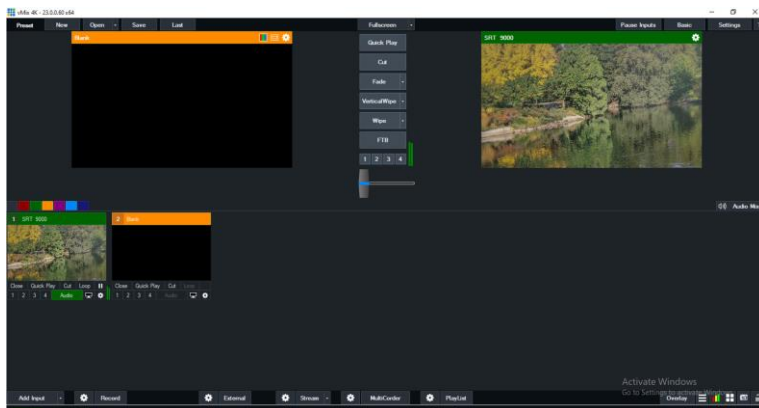

# 16. Remote Control Port Pinouts


In addition to using the Ethernet port for remote control, you can also connect your PC or any keyboard controllers to the RS-422 remote port to control PTC-280. Use an Ethernet cable to connect the external RS-422 controller to PTC-280 You can make your own cable using the pinout information provided in this chapter.

## Remote Control Port

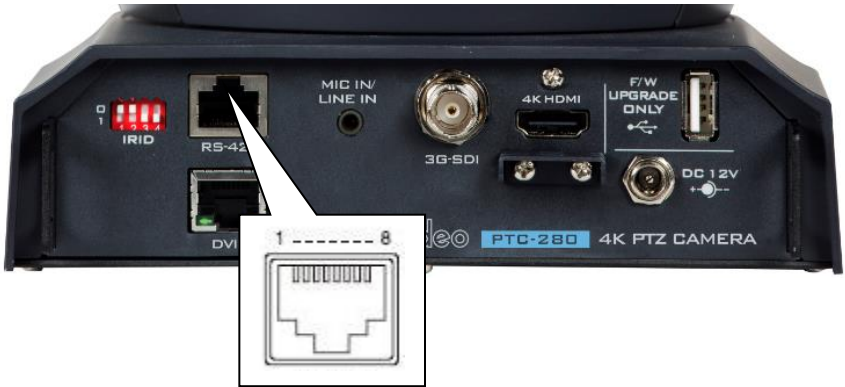



The RS-422 pinouts are described below.

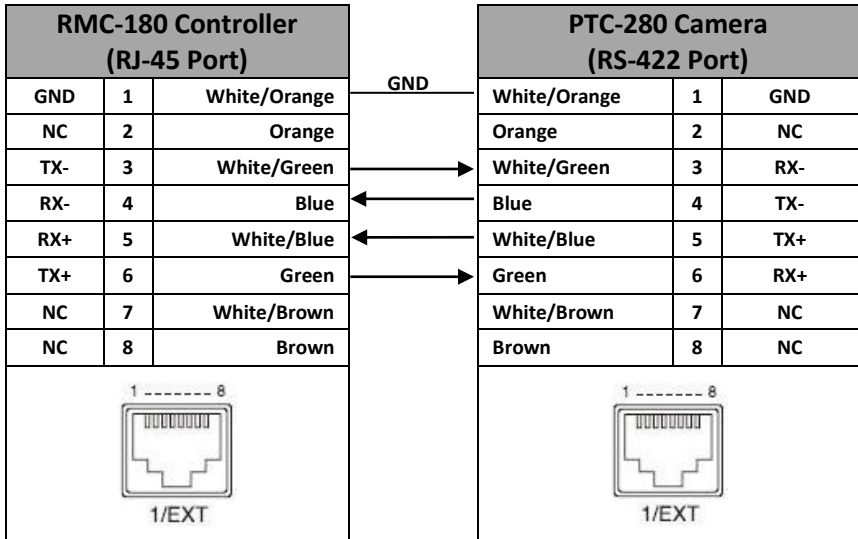

## 17. Firmware Update

Datavideo usually releases new firmware containing new features or reported bug fixes from time to time. Customers can either download the firmware as they wish or contact their local dealer or reseller for assistance.

This section outlines the firmware upgrade process which should take *approximately few minutes to complete*.

**The existing settings should persist through the *firmware upgrade process, which should not be interrupted once started* as this could result in a non-responsive unit.**

### 17.1 Firmware Update by the PTC-280 Firmware Update Tool

#### Requirements


- PTC-280 Unit
- PC/Laptop
- Latest firmware files
- Download from: <https://www.datavideo.com/product/PTC-280>
- Ethernet Cable

#### Procedure


1. At first, please confirm that the IP address of your laptop is set within the same LAN as the PTC-280 camera. Please use an Ethernet cable to connect from the RJ-45 Ethernet port of your laptop to the DVIP port which is on the rear panel of the PTC-280.

2. Please download the PTC-280 firmware “VXxxD\_Ax.D\_Vx.x.xxx\_xx.xM\_yyyyymmdd” and firmware update tool “upgrade vx.x” from Datavideo official website.

3. Please unzip the downloaded firmware and firmware update tool to the hard disk of your laptop.

4. Please double-click the firmwar3e update tool upgrade.exe  upgrade .


5. Users can see that the interface of the firmware update tool is shown as following diagram.

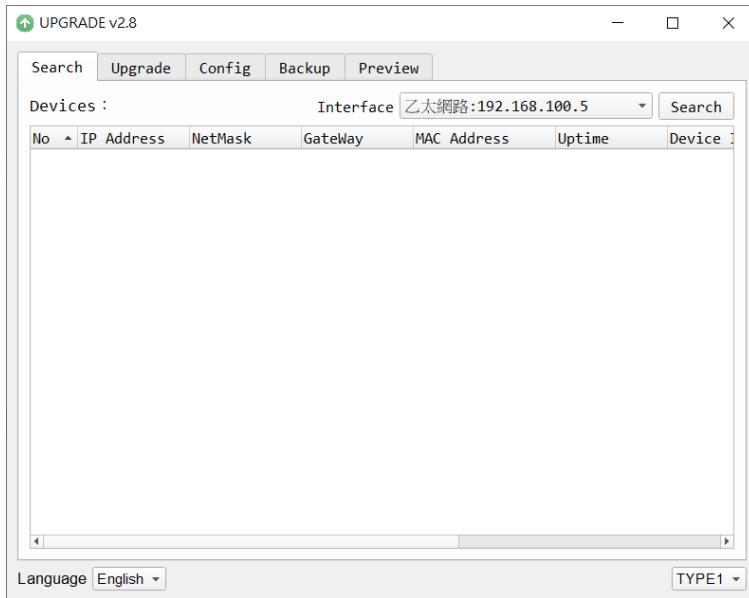


6. Please select the LAN IP address which is set by your laptop from the “Interface” drop-down menu.

Interface **Ethernet:192.168.100.5**


7. Please select the “Upgrade” option and then users can see the interface which is shown as following diagram.

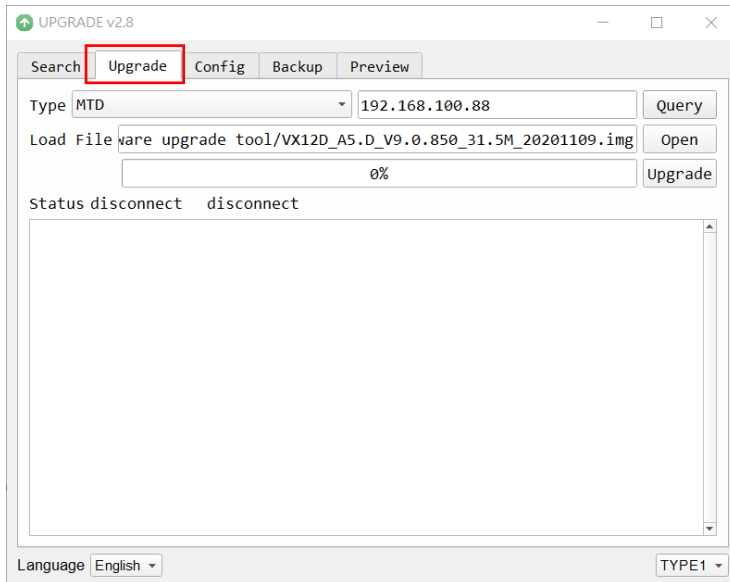


8. Please click the “Open” button and select the downloaded latest firmware.

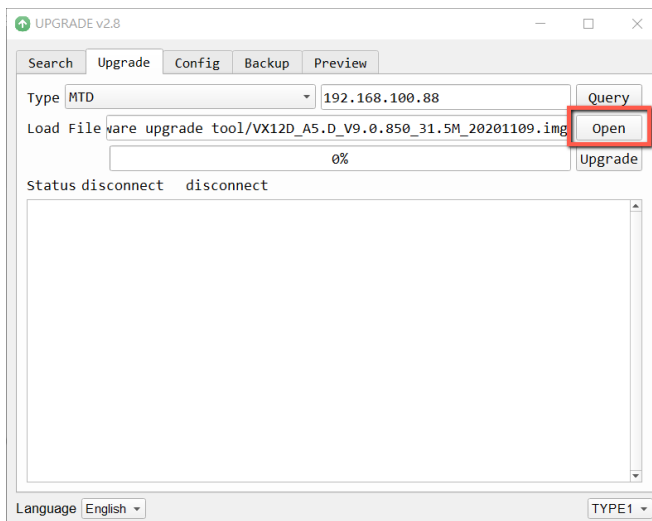

9. Please click the “Upgrade” button for starting the firmware upgrading. At this time, the external connected monitor will show the wording” **Upgrading! Please Wait!** ”

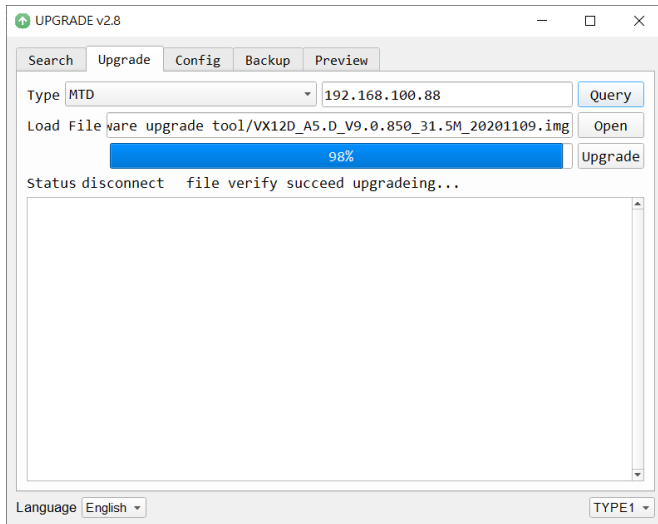

10. After the firmware upgrading is finished, the PTC-280 camera will reboot automatically, please click the “OK” button and then the firmware upgrade procedure is completed.

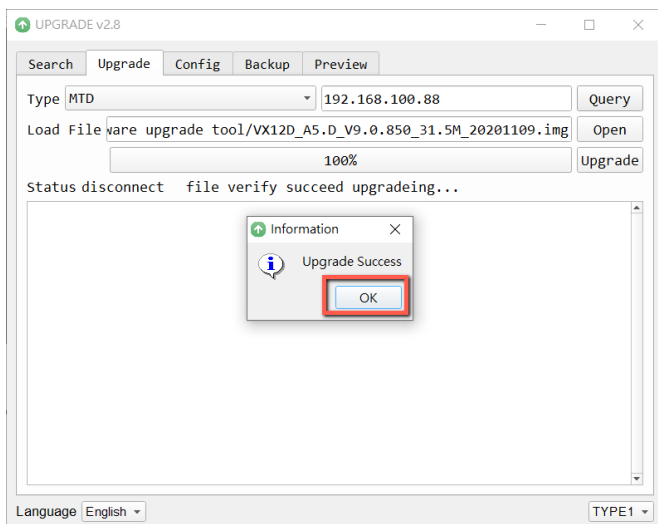

## 17.2 Firmware Update by the USB Flash Drive

### Requirements


- PTC-280 Unit
- USB 2.0 or USB3.x USB Flash Drive x 1
- Laptop
- Latest firmware files

Download from: <https://www.datavideo.com/product/PTC-280>


- Ethernet Cable


### Procedure

1. At first, please format your USB flash drive in FAT32 format.
2. Please download the latest PTC-280 firmware file from Datavideo official website's PTC-280 product page <https://www.datavideo.com/product/PTC-280> and then save it to the hard disk of your laptop.
3. Please unzip the downloaded firmware file and then save the latest firmware file "VX12D\_A5.D\_Vx.x.xxx\_31.5M\_yyyymmdd.img" into the root directory of your USB flash drive.

 VX12D\_A5.D\_V9.0.897\_31.5M\_20210312.img

4. Please insert your USB flash drive with the latest firmware file into the "F/W UPGRADE ONLY" USB interface which is located on the rear panel of the PTC-280.


5. Please press the "MENU" button  from the PTC-280 remote controller to open the OSD menu.

6. Please press the "down-arrow" button  to move to the "Setup" option in the OSD menu.


7. After the “Setup” option is selected, please press the “Home” button



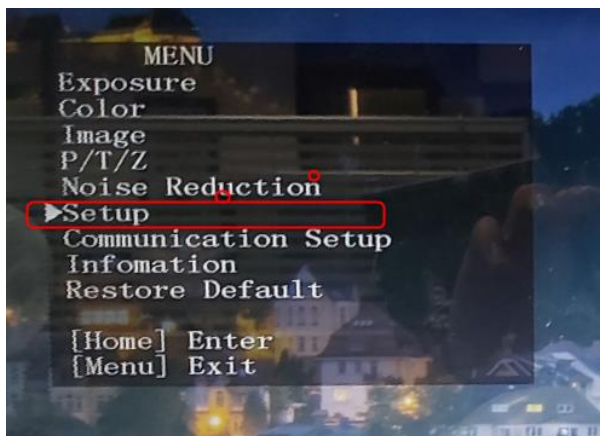


from the PTC-280 remote controller to enter the “Setup” page.

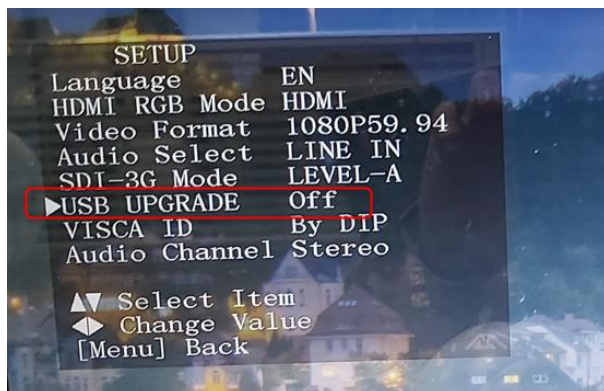


8. Please press the “down-arrow” button  from the PTC-280 remote controller to move to the “USB UPGRADE” option in the “Setup” page.



9. Please press the “left-arrow” or “right-arrow” button  /  to set the “USB UPGRADE” option as “ON”. After that, please press the “Home” button

 from the PTC-280 remote controller for confirmation and then the PTC-280 will start the firmware update procedure automatically. During the firmware update procedure, the warning “Updating! Please Wait!” will be shown by the external monitor. When the firmware update procedure is finished, the PTC-280 will reboot automatically. The whole firmware update procedure is done successfully.

Note: Please do not turn off your computer during the firmware update process to prevent it from crashing. Moreover, there is a period of time that there is no image that will be shown on the monitor. At this moment, please do not turn off the power of the PTC-280 camera. The camera will reboot automatically after the whole firmware update procedure is done.

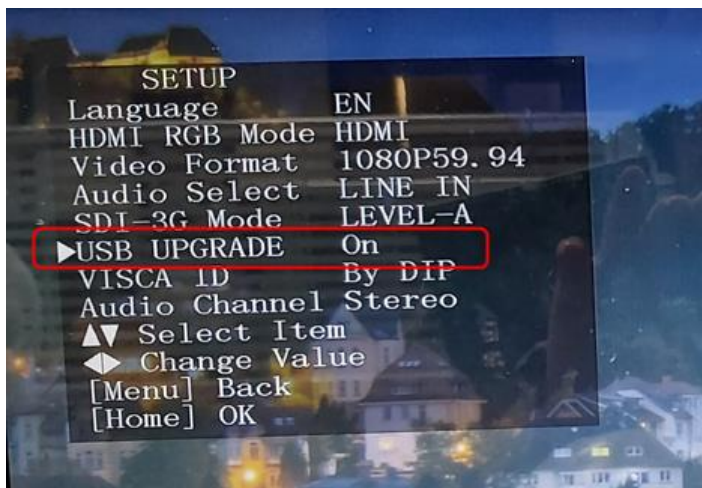




## 18. Frequently-Asked Questions

This section describes problems that you may encounter while using PTC-280. If you have any questions, please refer to related sections and follow all suggested solutions. If problem still exists, please contact your distributor or the service center.

No.	Problems	Solutions
1.	What are important points for product maintenance?	<ol style="list-style-type: none"><li>1. If the camera will not be used for a long time, please unplug the 12V DC power plug, and remove AC power adapter from AC outlet.</li><li>2. Use soft cloth or tissue to clean the camera.</li><li>3. After washing the camera lens, dry it with a soft dry cloth. Use a neutral detergent rather than acidic or corrosive detergents to clean the lens.</li></ol>
2.	There is no output video.	<ol style="list-style-type: none"><li>1. Check that your power is properly connected. This is indicated by the power LED.</li><li>2. After you reboot the camera, please check that whether the camera can do the self-test normally or not.</li><li>3. Please check that the camera is connected correctly to the external connected monitor.</li></ol>
3.	I have seen image jitter while zooming in or out.	<ol style="list-style-type: none"><li>1. Make sure the camera is properly mounted.</li><li>2. Make sure that machines that could cause vibration are not in proximity of the camera.</li></ol>
4.	There is no image by using the IE browser.	Please go the the VLC website ( <a href="http://www.videolan.org/vlc">http://www.videolan.org/vlc</a> ) to download the 32-bit VLC media player. After it is installed, the screen will be shown normally when connecting to the camera.

5.	The camera can not be accessed by using the IE browser.	<ol style="list-style-type: none"> <li>1. Use PC to access the internet to see whether it can operate normally or not. At first, please solve the network failure that is caused by the computer virus until the PC and the camera can ping each other.</li> <li>2. Please remove the Ethernet cable and then connect the PC to the camera directly. After that, please reset the IP address of the PC.</li> </ol>
6.	The remote control is not working.	<ol style="list-style-type: none"> <li>1. Try setting the camera to CAM1 and try again.</li> <li>2. Make sure the remote control's battery is fully charged.</li> <li>3. Check your device working mode.</li> <li>4. Make sure the OSD menu is closed.</li> </ol> <p>The remote control cannot be used if the OSD menu is opened.</p>
7.	The serial port is not working properly.	<ol style="list-style-type: none"> <li>1. Make sure your baud rate and device addresses are correct.</li> <li>2. Check your device working mode.</li> <li>3. Make sure the OSD menu is closed.</li> </ol> <p>The remote control cannot be used if the OSD menu is opened.</p>
8.	Can not login to the Web control interface.	<ol style="list-style-type: none"> <li>1. Please check your Ethernet cable.</li> <li>2. Please check your Ethernet setting such as the IP address.</li> </ol>

# 19. Dimensions

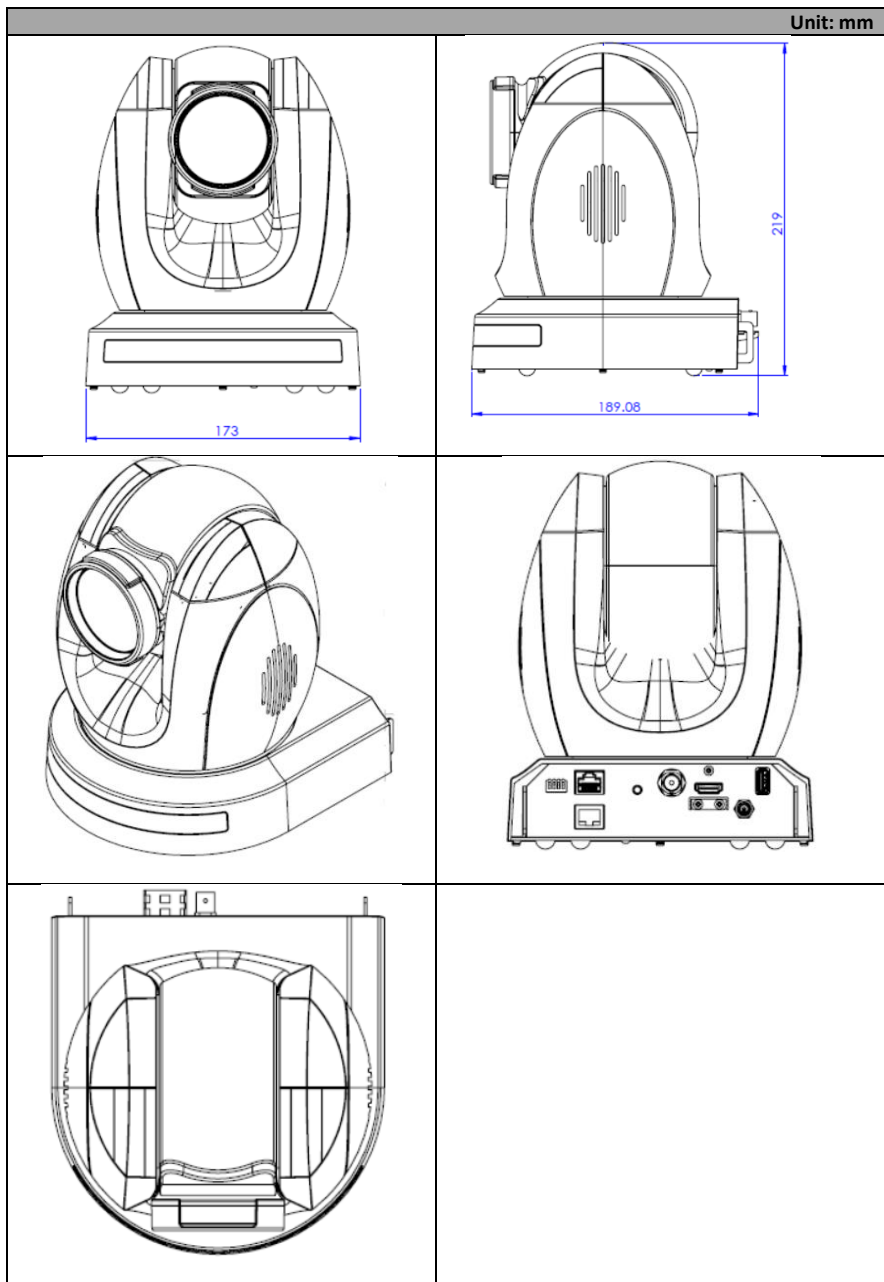

## 20. Specifications

Camera Parameters	
<b>Product Name</b>	4K PTZ camera
<b>Video Format</b>	HDMI: 2160p 60/59.94/50/30/29.97/25 1080p 60/59.94/50/30/29.97/25 1080i 60/59.94/50 720p 60/59.94/50  SDI: 1080p 60/59.94/50/30/29.97/25 1080i 60/59.94/50 720p 60/59.94/50  (2160p 60/59.94/50 YUV 4:2:0 only)
<b>Image Sensor</b>	1/2.5" CMOS Sensor
<b>Effective Pixels(approx.)</b>	8.51Mega Pixels
<b>S/N Ratio</b>	≥55dB
<b>Min. Illumination</b>	0.5 Lux @ (F1.8, AGC ON)
<b>Electronic Shutter</b>	1/30s ~ 1/10000s
<b>Zoom Ratio</b>	12x Optical Zoom, 16x Digital Zoom
<b>Gamma Control</b>	Off / Normal
<b>Iris Control</b>	Auto / Manual
<b>Digital Noise Reductions</b>	2D/3D
<b>On-Screen Display (OSD)</b>	English、 Traditional Chinese、 Simplified Chinese、 Russian
<b>White Balance</b>	Auto/Indoor/Outdoor/OnePush/Manual/VAR
<b>AGC / Gain Control</b>	Yes
<b>Mirror / Flip Image</b>	Yes
<b>Focus Mode</b>	Auto / Manual

<b>Panning / Tilting Range</b>	Pan: 300 degrees, Tilt: +130 to -15 degrees
<b>Panning / Tilting Speed</b>	Pan: 0.876°/s~43°/s Tilt: 0.693°/s ~21.32°/s
<b>Preset</b>	255 Positions
<b>Focal Length</b>	12x, f=4.4 (wide) to 52.8 (tele) mm F1.8 to F2.6
<b>Field of View (Horizontal, Wide)</b>	71°
<b>Image Compensation</b>	Backlight Compensation
<b>Input /Output Interfaces</b>	
<b>Video Output</b>	HDMI 2.0 x1 3G-SDI x1 10/100/1000M RJ45 x1
<b>Audio Input</b>	3.5mm x1
<b>Tally LED</b>	Yes
<b>Lens Filter</b>	N/A
<b>Control Protocol</b>	Pelco-D, Pelco-P, VISCA, VISCA over IP, DVIP
<b>Remote Control Interface and Transmit Distance</b>	IR Web GUI RS-422 DVIP
<b>Video Compression Format</b>	H.264/H.265/MJPEG
<b>Audio Compression Format</b>	AAC
<b>Audio Bitrate</b>	96Kbps, 128Kbps, 256Kbps
<b>Streaming Protocols</b>	RTSP, RTMP(S), Onvif, Multicast, SRT
<b>First Stream Supported Resolution</b>	3840x2160 1920x1080 1280x720 1024x576 960x540 640x480 640x360

<b>Second Stream Supported Resolution</b>	1280x720 1024x576 720x576 (50Hz) 720x480 (60Hz) 720x408 640x360 480x270 320x240
<b>Video Bitrate</b>	32Kbps ~ 50Mbps (Single Stream)
<b>Video Bitrate Mode</b>	VBR, CBR
<b>Encoding Frame rate</b>	50Hz: 1-50fps 60Hz: 1-60fps
<b>POE</b>	IEEE 802.3at
<b>Others</b>	
<b>F/W Update</b>	By web UI or USB 2.0 port
<b>IR Control</b>	Yes
<b>Camera Control Unit</b>	RMC-180 series/RMC-300 series/PTZ View Assist APP
<b>Tripod Mount</b>	1/4-20 UNC
<b>Optional Accessories</b>	WM-1/ WM-10/WM-11
<b>Color</b>	Dark Blue/White
<b>Dimensions</b>	173 (W) x 219 (H) x 189.08 (D) mm
<b>Weight</b>	2.8kg
<b>Operating Temp. Range</b>	0~40 °C
<b>Power</b>	DC 12V 12W

# Note

## Service & Support

It is our goal to make your products ownership a satisfying experience. Our supporting staff is available to assist you in setting up and operating your system. Please refer to our web site [www.datavideo.com](http://www.datavideo.com) for answers to common questions, support requests or contact your local office below.

[www.datavideo.com/product/PTC-280](http://www.datavideo.com/product/PTC-280)

**datavideo**  
[www.datavideo.com](http://www.datavideo.com)



@DatavideoUSA @DatavideoIndia2016  
@DatavideoEMEA @Datavideojapan  
@DatavideoTaiwan @DatavideoLatam  
@DatavideoAsia @DatavideoBrasil



@Datavideo  
@Datavideo\_EMEA  
@Datavideo\_Taiwan



@DatavideoUSA  
@DVTWDVCN



@DatavideoUSA  
@DatavideoEurope

All the trademarks are the properties of their respective owners.  
Datavideo Technologies Co., Ltd. All rights reserved 2020