Getting Started: How to unlock the drive

datAshur® Personal² USB3.0

EASY TO USE

YOUR datAshur Personal² SHIPS WITH DEFAULT PIN CODE 1-1-2-2-3-3-4-4

1. *Press **KEY Button**	All LEDs will flash together once and then blink
2. *Within 10 seconds enter **User PIN** (factory default **PIN** 1-1-2-2-3-3-4-4) and press **KEY Button**	solid for approximately 2 seconds and then change to solid
3. Connect the datAshur Personal² into USB port within 30 seconds	remains solid will flicker and turn to solid
4. datAshur Personal² can now be accessed as any other storage device	Your computer assigns a new drive letter (e.g. F: or G:)
5. To lock the datAshur Personal², save all data and unplug the drive	All indicators will turn off Drive is now locked

*before connecting

= + PIN +

iStorage datAshur Personal² is developed and manufactured by iStorage Ltd. and is based on DataLock® technology licensed from ClevX, LLC

DataLock SECURED

Quick Start Guide

Please note:

The datAshur Personal² drive may need to be charged before use for 30-60 minutes by inserting into a powered USB port.

FOR SECURITY, CHANGE FACTORY DEFAULT PIN

SEE OTHER SIDE FOR INSTRUCTIONS

iStorage® DATA ASSURED

www.istorage-uk.com

How to change User PIN:

iStorage® DATA ASSURED

CAUTION

FOR SECURITY, CHANGE FACTORY DEFAULT PIN

PIN must not be sequential or all the same number e.g. 1-2-3-4-5-6-7 or 3-3-3-3-3-3-3
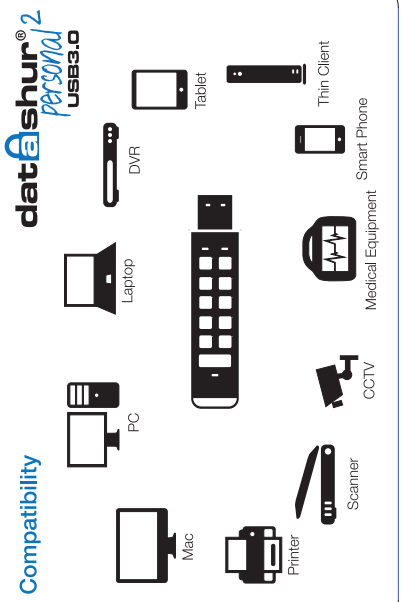
1. Press **KEY Button**	All LEDs will flash together and then blink
2. Enter **User PIN** (factory default **PIN** 1-1-2-2-3-3-4-4) and press **KEY Button**	solid for approximately 2 seconds and then change to solid
3. Press **KEY Button twice**	will blink
4. Within 10 seconds enter **New User PIN** (must be 7 -15 digits) and press **KEY Button** twice	will blink
5. Re-enter **New User PIN** and press the **KEY Button** twice Insert datAshur Personal² into USB port	will illuminate and then change to solid if PIN entries matched solid if PIN entries not matched